

VT8000 Room Controllers

VTR8350 User Interface Guide

Line Voltage Fan Coil Unit (FCU)

Firmware Revision 2.6




Table of Contents


- Safety Information 3
- Before You Begin..... 4
- Section 1**
- Introduction 6
- User and Integrator Screens 6
- Disclaimer 7
- BACnet Integration Guide References 7
- HMI Display..... 8
- Enter Setup Screen 9
- Section 2**
- User HMI for Hospitality 11
- User HMI for Commercial..... 12
- User HMI Show/Hide Options 13
- System Mode 14
- Fan Mode Settings 14
- Heating Only Configuration..... 15
- Setpoint Adjustment for Cooling Mode..... 15
- Setpoint Adjustment for Automatic Mode 16
- Other Functions..... 16
- Customizable Color Options 17
- Section 3**
- Network Screens 19
- Configuration Screens..... 33
- Setpoints Screens 49
- Display Screens 51
- Service View Screens 56
- Test Outputs Screens 63
- Language Selection Screens 64
- Clock - Schedule Screens..... 66
- Automatic Demand Response (ADR) Screen..... 70
- Wireless Screens..... 71
- Lua Screens 80

Safety Information

IMPORTANT INFORMATION

Read these instructions carefully and inspect the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

 The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Before You Begin

LOSS OF CONTROL

NOTICE

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over travel stop.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.¹
- Each implementation of equipment utilizing communication links must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in equipment damage.

ELECTROSTATIC DISCHARGE

NOTICE

STATIC SENSITIVE COMPONENTS

Circuit boards and option cards can be damaged by static electricity. Observe the electrostatic precautions below when handling controller circuit boards or testing components.

Failure to follow these instructions can result in equipment damage.

Observe the following precautions for handling static-sensitive components:

- Keep static-producing material such as plastic, upholstery, and carpeting out of the immediate work area.
- Store static-sensitive components in protective packaging when they are not installed in the drive.
- When handling a static-sensitive component, wear a conductive wrist strap connected to the component or drive through a minimum of 1 megohm resistance.
- Avoid touching exposed conductors and components leads with skin or clothing.

¹ For additional information about anticipated transmission delays or failures of the link, refer to NEMA ICS 1.1 (latest edition), *Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control* or its equivalent

SECTION 1

Introduction


Introduction

This guide shows the user interface instructions for the VTR8350 Series Room Controller (RC) firmware revision 2.6 for users and integrators.

User and Integrator Screens

The VTR8350 Room Controller has dynamic screens that show adjustable parameters and read-only status information. Some screens and parameters show only when a corresponding parameter is selected. Some screens show only on models with onboard Zigbee, optional Zigbee add-on module (VCM8000), optional Wi-Fi module (VCM8002) or paired Zigbee wireless sensor end devices (SED). The Lua selection on the Setup screen shows only if a Lua script is uploaded to the Room Controller.

See below legend screen details.

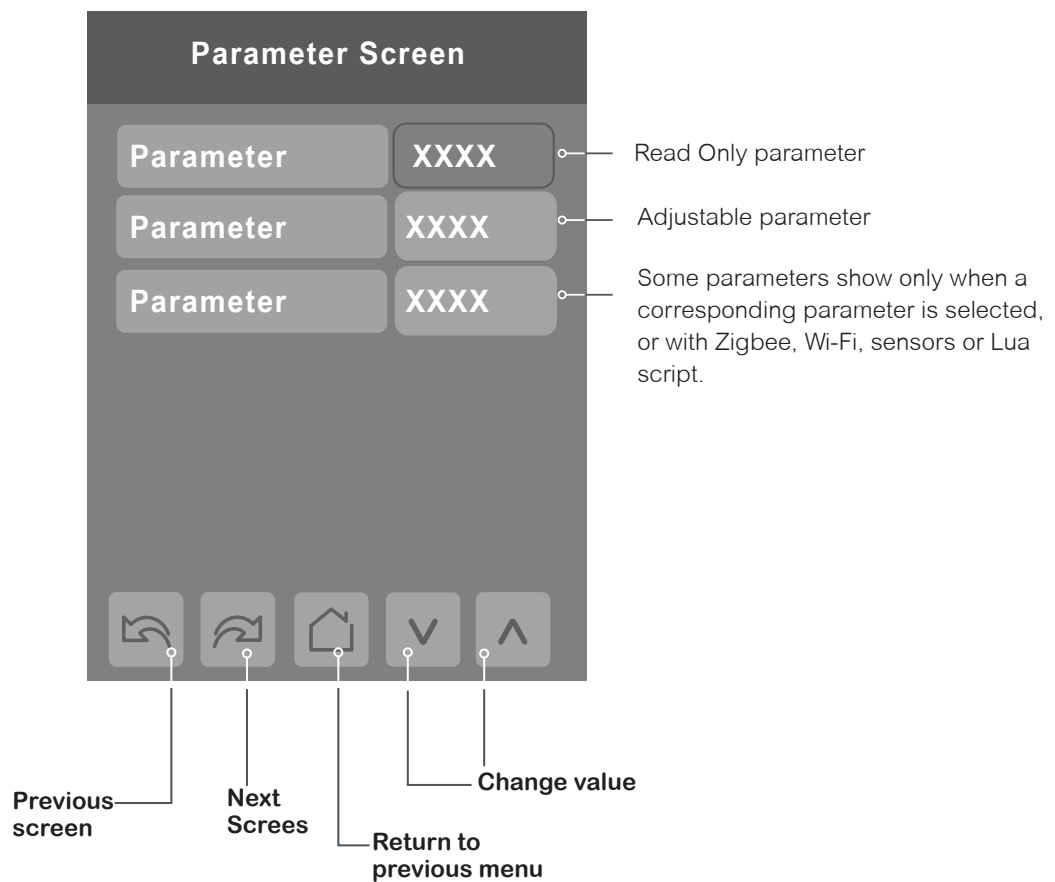

NOTE: When any change is made to a parameter, the value is automatically saved in memory when the next parameter is selected or another screen is opened. This event is true only if a parameter was changed locally on the RC. Making changes through BACnet will not have the same outcome. If changes need to be done remotely through BACnet, use priority 1, 2 or 3, or write to relinquish default (priority 17).

Disclaimer

Standby screen: The Room Controller incorporates TFT-type LCD technology, and therefore, necessary precautions are required to prevent the phenomenon of image retention (residual image) from occurring.

Image retention may occur when a static image is displayed on the screen for a prolonged period of time. This can cause a faint outline of the image to remain visible on the screen when the screen is changed via the user menu, or a different image is uploaded and selected to be displayed. To minimize and prevent image retention, it is recommended to select the **Screen save** setting on the **Standby screen** selection from the setup menu "**Display 1/3**" on page 51. This setting switches the display during periods of inactivity from the Home Screen.

It is recommended to use a black or medium gray image, or one with light color contrasts as the screen saver to prevent this phenomenon from occurring. If the display still exhibits this phenomenon, loading an all-black or all-medium gray image as the screen saver and displaying it for upwards of 5 hours continuously minimizes this effect.

NOTE: Avoid placing the Room Controller in poorly ventilated areas, or in areas that may create excess heat around the display.

BACnet Integration Guide References

To simplify cross-referencing between the User Interface Guide and the [BACnet Integration Guide](#), BACnet object properties are included in the Parameter Details tables as follows:


- **Object name.**
- **Instance number** and **object type prefix.** Object type prefixes are described as follows:
 - AI - Analog Input
 - AO - Analog Output
 - AV - Analog Value
 - BI - Binary Input
 - BO - Binary Output
 - BV - Binary Value
 - CSV - Comma-Separated Value
 - MSI - Multi-State Input
 - MV - Multi-State Value
- **Binary range values** (for BI, BO, BV, MSI and MV instance numbers) and **status enumeration** descriptions.

PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
Fan status Default value: Off MSI326 ○— Instance number	Fan Speed Status ○— Object name Status value: 1=Off, 2=Low, 3=Med, 4=High ○— Range values and enumeration

HMI Display

The User Human Machine Interface (HMI) is configurable and allows display functions such as Date, Time, Humidity, CO2 levels, Outdoor Temperature and Setpoint to be enabled or disabled by setting various parameters.

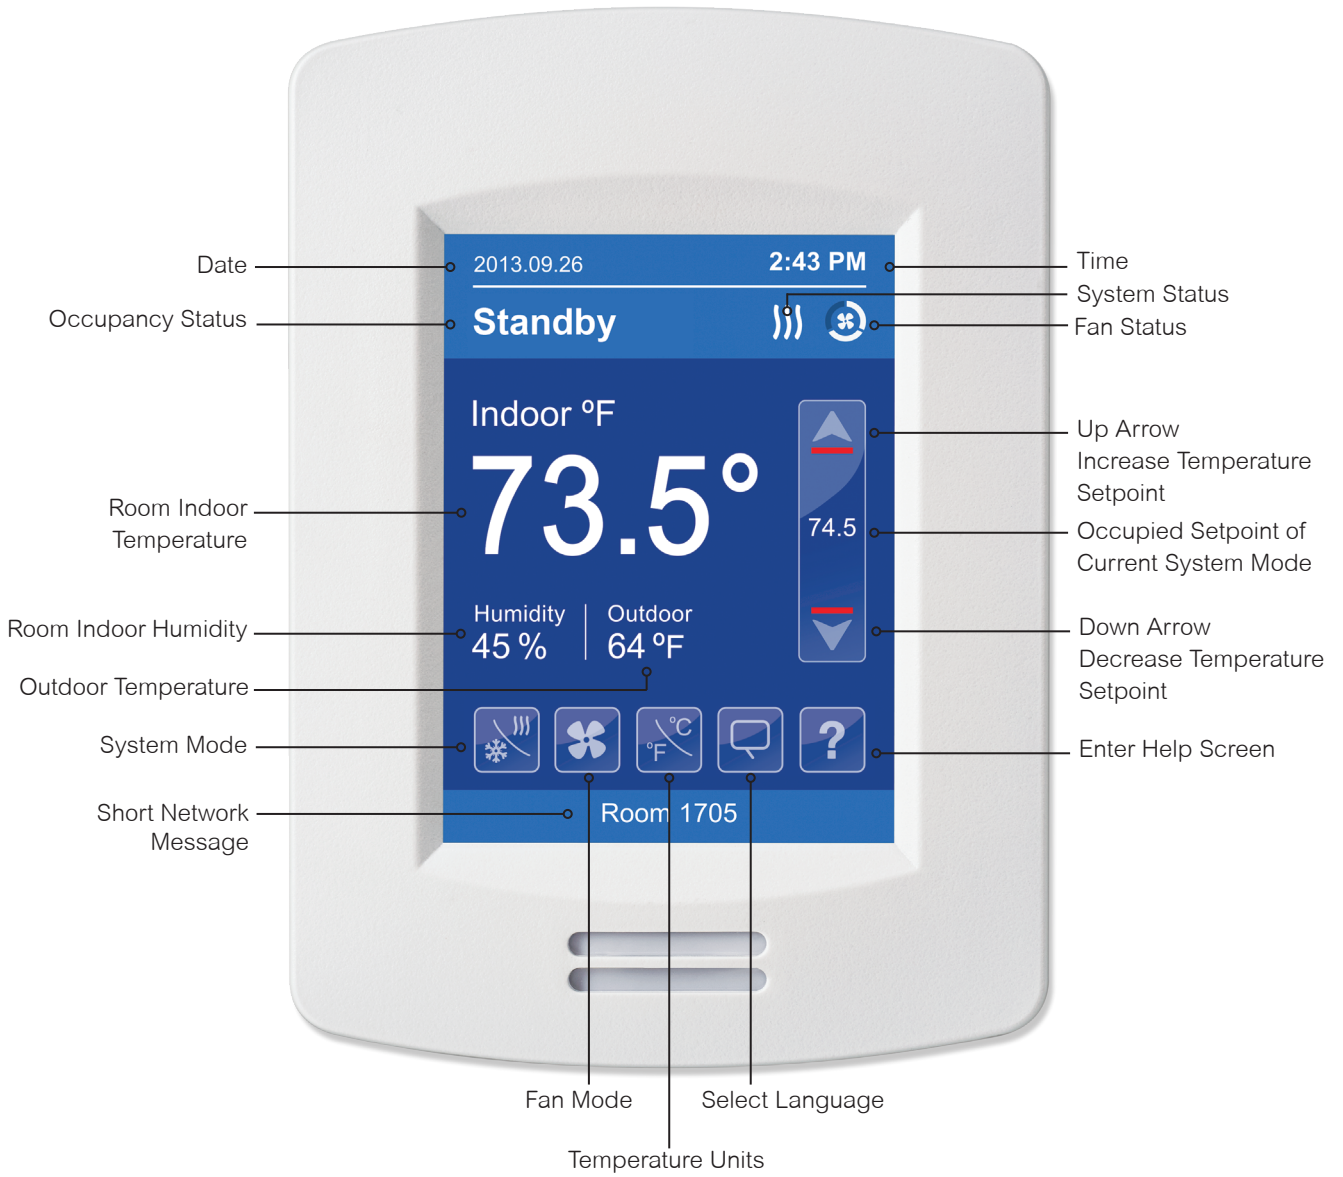


Enter Setup Screen

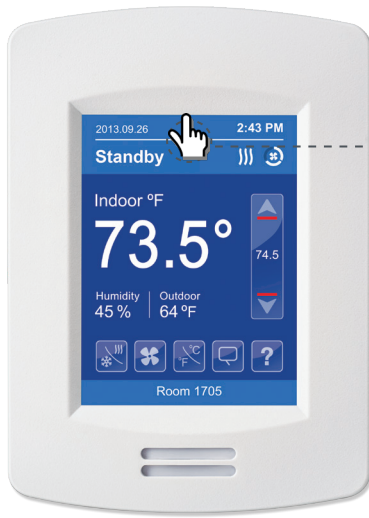

Touch and hold this point for 3 seconds to enter setup mode

Note: If a configuration/installer password is activated to prevent unauthorised access to the configuration menu parameters, a password entry prompt shows to prevent access to device configuration components.

SETUP 1/2

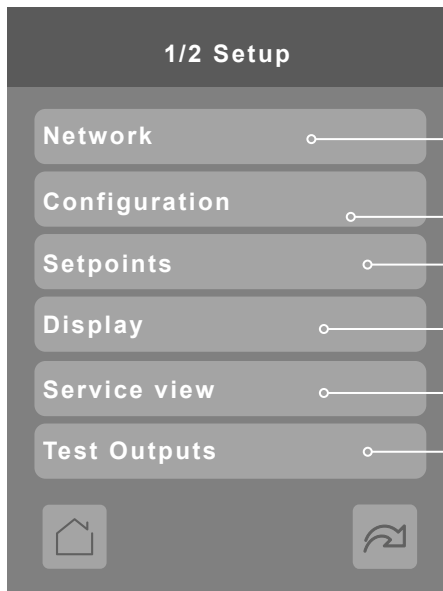

Network — BACnet MS/TP, Modbus, Zigbee and Wi-Fi network settings (Zigbee network settings appear only if Zigbee feature is available)

Configuration — Parameter configuration menu


Setpoints — Setpoint settings

Display — Display settings

Service view — Status display (Read Only)

Test Outputs — Test outputs settings

SETUP 2/2

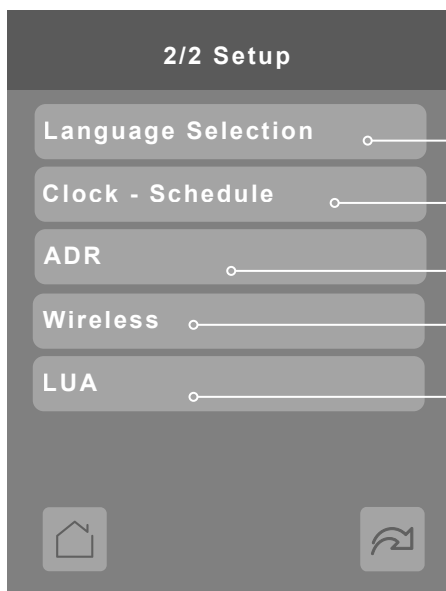

Language Selection — Choose language

Clock - Schedule — Set clock, schedule and occupancy

ADR — Automatic Demand Response

Wireless — Wireless Ecosystem settings (shows only if Zigbee feature is available)

LUA — Lua scripting (shows only if Lua script uploaded)

SECTION 2

Customized User HMI Display

User HMI for Hospitality

To select the User HMI configuration, refer to "Display 1/3" on page 51.

Hospitality 0	Hospitality 1	Hospitality 2	Hospitality 3
<ul style="list-style-type: none"> • Setpoint adjustment • System mode setting • Fan mode setting • Local unit scale adjustment • Local user language • User help menu 	<ul style="list-style-type: none"> • Setpoint adjustment • System mode setting • Fan mode setting • User help menu 	<ul style="list-style-type: none"> • Setpoint adjustment • Local unit scale adjustment • Local user language • User help menu 	<ul style="list-style-type: none"> • Setpoint adjustment • User help menu

NOTE: Parameters are model dependent and may not appear on certain models.

Hospitality 4	Hospitality 5	Hospitality 6
<ul style="list-style-type: none"> • Fully locked interface with no user settings 	<ul style="list-style-type: none"> • Setpoint adjustment • System mode setting • User help menu 	<ul style="list-style-type: none"> • Setpoint adjustment • System mode setting • Fan mode setting • Local unit scale adjustment • User help menu

User HMI for Commercial

Commercial 7




- Setpoint adjustment
- System mode setting
- Fan mode setting
- Unoccupied mode override
- User help menu

Commercial 8




- Setpoint adjustment
- Unoccupied mode override
- Local user language
- User help menu

Commercial 9

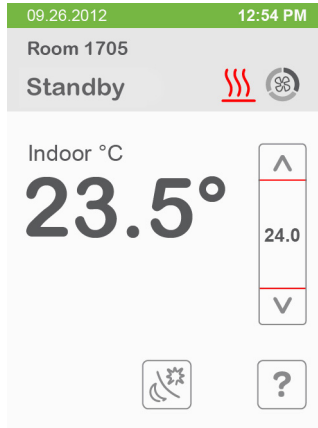


- Setpoint adjustment
- Unoccupied mode override
- User help menu

Commercial 10

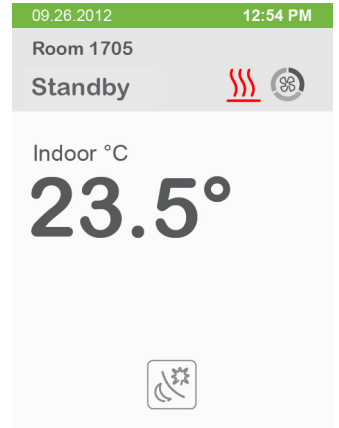


- Unoccupied mode override

Commercial 11

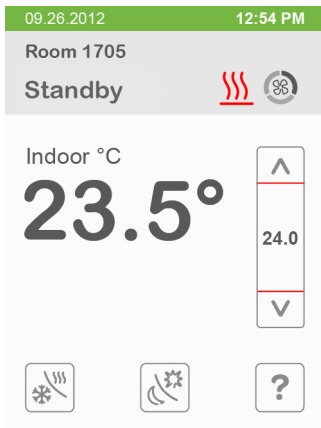

- Setpoint adjustment
- System mode setting
- Unoccupied mode override
- User help menu

Commercial 12

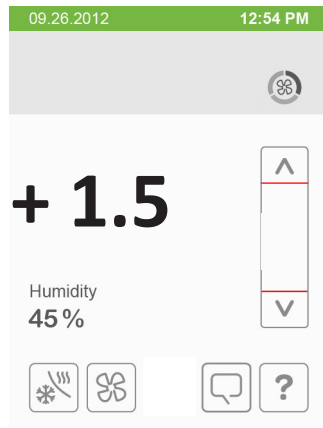


- Offset setpoints adjustment
- System mode setting
- Local user language
- Fan mode setting
- User help menu

NOTE: The day/night setback button appears only in unoccupied mode in the Commercial HMIs 7 to 11. If UI17 input is configured as "override", the day/night setback button does not show.

NOTE: Parameters are model dependent and may not appear on certain models.

User HMI Show/Hide Options


User HMI displays can be customized further by hiding the system status, fan status or help button. Each show/hide option is applicable to all User HMI configurations where the option is shown. To hide the option, select disabled for each display setup screen parameter. Refer to "Display 3/3" on page 55.

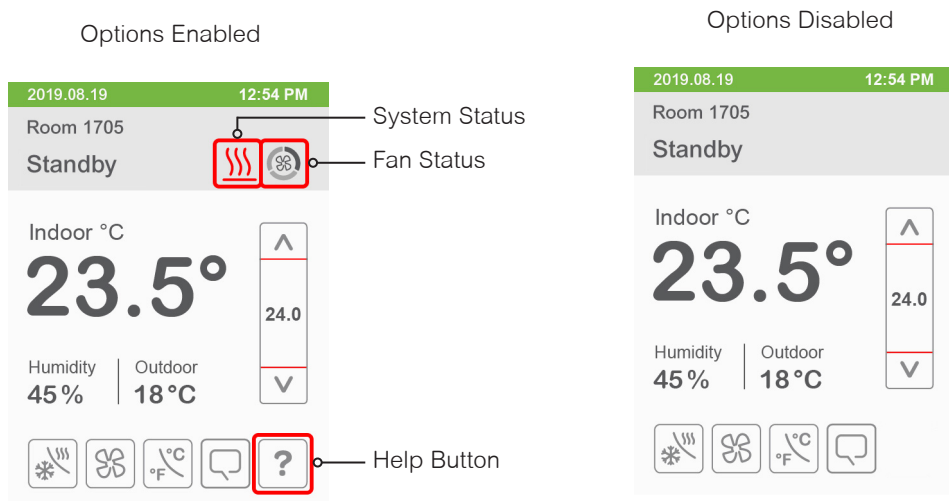

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Control status Default value: Off MV112	System Status (BACnet object name: Control Status) Status value: 1=Off, 2=Cool, 3=Heat
Fan status Default value: Off MSI326	Fan Speed Status Status value: 1=Off, 2=Low, 3=Med, 4=High


System Mode

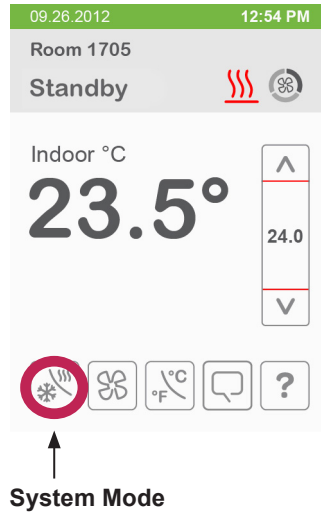

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
System mode Default value: Heat MV16	System Mode Off: Heating, Cooling and Dehumidification demands are ignored. Auto: Room Controller automatically toggles between Heating and Cooling modes to satisfy both Heating and Cooling demands. Dehumidification is allowed. Cool: Room Controller only satisfies Cooling demands, Heating demands are ignored. Dehumidification is allowed. Heat: Room Controller only satisfies Heating demands, Cooling demands are ignored. Dehumidification is allowed. Choices: 1=Off, 2=Auto, 3=Cool, 4=Heat

Fan Mode Settings

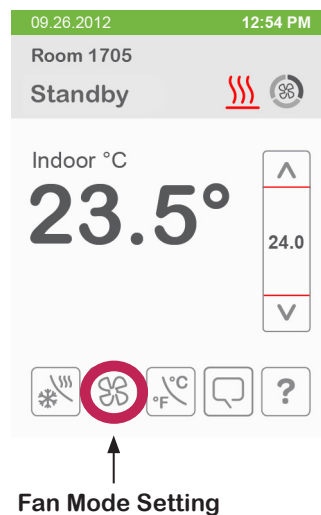


The Fan mode settings displayed on the home screen must be configured in the Fan menu tab of the Configuration menu.

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Fan mode Default value: Auto MV17	Fan Mode Choices: 1=Low, 2=Med, 3=High, 4=Auto, 5=On

Heating Only Configuration

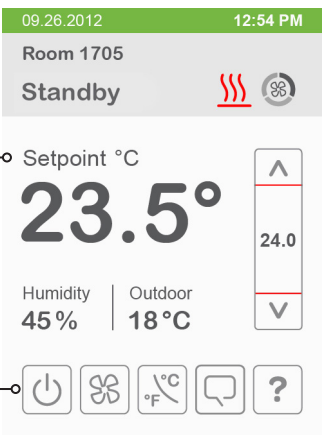


Time and Date show only when a network time synchronisation command is received.

Setpoint value shows if main display parameter is set to Setpoint.

On/Off icon is used instead of system mode icon when sequence of operation is set to either heating only or cooling only.

Setpoint Adjustment for Cooling Mode

In Cooling mode, the setpoint displayed in the bar is the current occupied cooling setpoint. During occupied setpoint adjustment, the large digits are temporarily used to show occupied cooling setpoint while it is adjusted. Normal temperature display resumes after setpoint is adjusted and actual occupied cooling setpoint shows in setpoint bar.

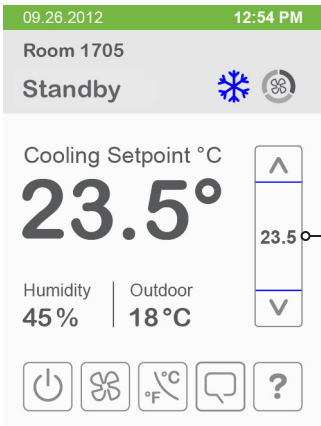


Cooling mode or cooling only sequence of operation.

Setpoint Adjustment for Automatic Mode

In automatic mode, setpoint showing at the top of the set point bar located directly under the red line represents the actual occupied cooling setpoint.

During occupied setpoints adjustment, large digits are temporarily used to display the occupied Cooling Setpoint or occupied Heating Setpoint. The actual setpoint is dependent on the last effective demand (heating or cooling). The setpoint on top of the blue line represents the actual occupied heating setpoint. The differential between the occupied heating and cooling setpoint is defined by the minimum deadband configuration parameter.

Normal temperature display resumes after setpoints are adjusted and the actual occupied heating and cooling setpoints show in the setpoint bar.

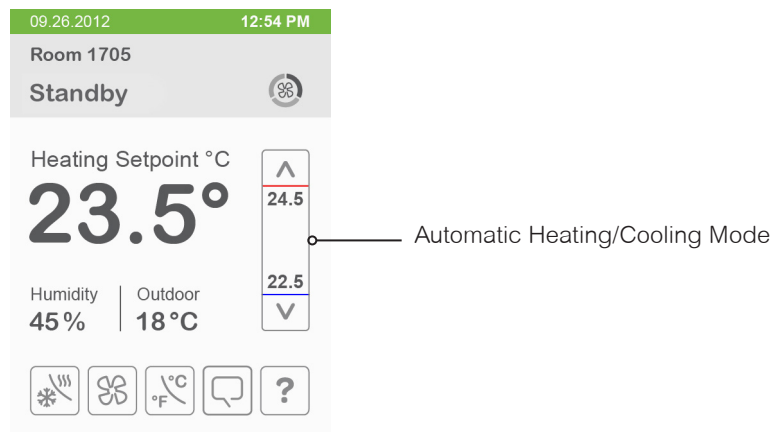


Other Functions

Local humidity shows when RH display is enabled on the setup display screen, from either the internal onboard sensor or a wireless sensor end device selected by the RH Display parameter on the setup configuration screen.

CO2 shows when CO2 display is enabled on the setup display screen, from either the optional CO2 detection sensor module or a wireless sensor end device selected by the CO2 source parameter on the setup configuration screen.

Outdoor temperature shows when receiving a valid networked outdoor temperature value.

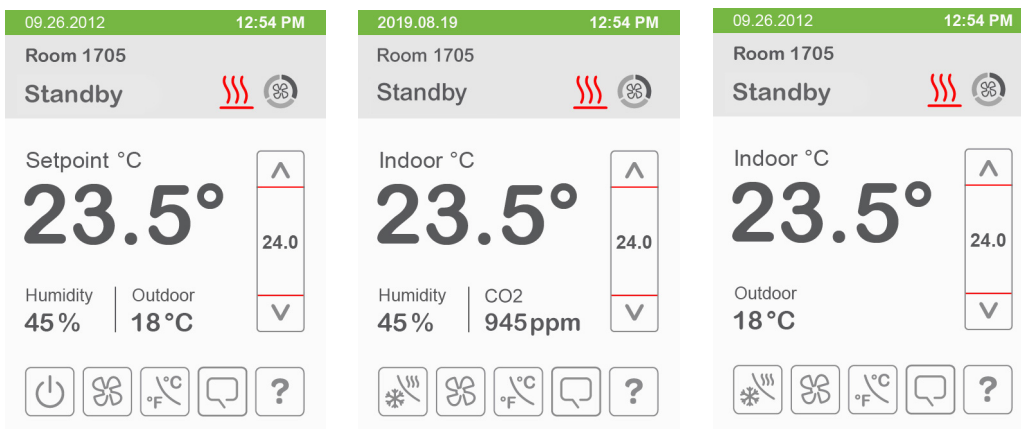


Customizable Color Options

To select the color option, refer to "Display 1/3" on page 51.



White

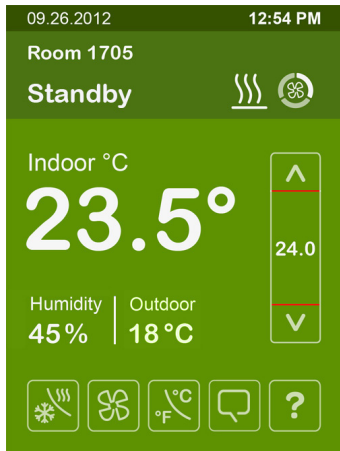

Green



Blue



Grey




Dark Grey



Pink



Purple

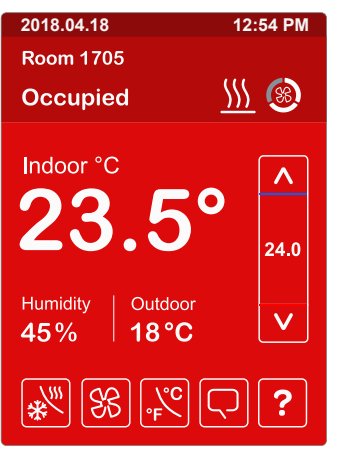

Red



Orange



Black

SECTION 3

Integrator Setup Screens

Network Screens

User can select wired BACnet / Modbus / Zigbee wireless protocol (when Zigbee feature is available).

NOTICE


UPGRADE OF ZIGBEE FIRMWARE REVISION 24 TO 30

The upgrade from Zigbee firmware revision 24 to 30 will **not** support the Green Power Sensor (SED-CO2-G-5045 or SED-TRH-G-5045). It will therefore need to be recommissioned.

There is also a new "Security Levels" parameter for the Zigbee network (see page 21):

- **Low** (default value) is fully backwards compatible with Zigbee Home Automation 1.2 devices, and therefore compatible with all of our sensors.
- **Normal** or **High** (needs to be selected by user) is only compatible with Green Power and Zigbee 3.0 network standard (Leedarson sensors). If the Normal or High Security Level is selected with old NYCE or Centralite sensors, they will be removed from the network.

Failure to follow these instructions can result in equipment being disconnected from the network.

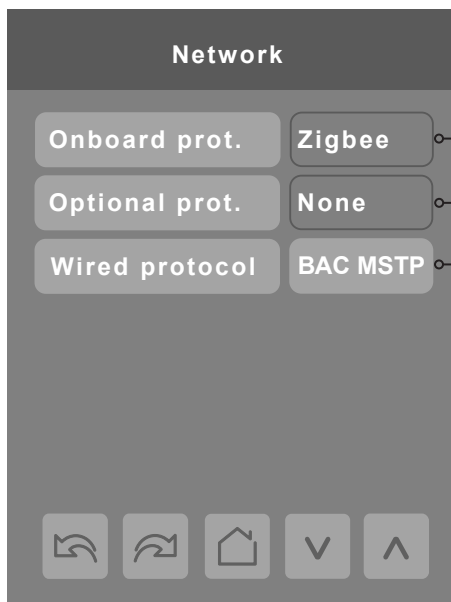

- Onboard Zigbee detection (Read Only)
- Type of expansion module: Zigbee, IP or BAC. IP (Read Only)
- Wired protocol (BACnet MS/TP or Modbus)

NOTICE

DISABLED WIRED NETWORK PROTOCOL

The RS-485 transceiver connected to pins 13 and 14 is not installed on Room Controllers with part numbers VTR8350A5500N, thus disabling the wired network protocol (BACnet MS/TP or Modbus). The network screens and the optional Wi-Fi protocol BACnet/IP will still operate normally.

When ordering, make sure the Room Controller specifications comply with your system design.

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Onboard prot. Read Only	Onboard Protocol Onboard Zigbee detection Display Readings: None or Zigbee
Optional prot. Read Only	Optional Protocol Requires Zigbee add-on module (VCM8000) or Wi-Fi module (VCM8002). BACnet/IP is enabled from the Configuration Web Page or the Uploader Tool. None: No module detected Zigbee: Zigbee module detected IP: Wi-Fi module detected BAC. IP: Wi-Fi module detected and BACnet/IP enabled Display Readings: None, Zigbee, IP or BAC. IP
Wired protocol Default value: BAC MSTP	Wired Protocol None: No wired protocol configured BAC MSTP: BACnet MS/TP network protocol Modbus: Modbus network protocol Choices: None, BAC MSTP or Modbus

ZIGBEE NETWORK 1/3


The Zigbee Network screen shows only in models with onboard Zigbee or optional Zigbee add-on module.

When creating a Zigbee network, there must be one and only one device with its Node Type set to Coordinator.

For a Zigbee network with a single Room Controller (RC), the RC is set as Coordinator to pair with the Sensor End Devices (SED). Setting the RC back to Router will remove the paired SEDs.

For a Zigbee network with a Building Management System (BMS) server or controller paired to multiple RCs, the BMS is set as Coordinator and the RCs are set as Router. The Coordinator BMS controls the pairing of the Router RCs to the SEDs.

Note: Before pairing any Zigbee devices, the network must first be created by the Coordinator.

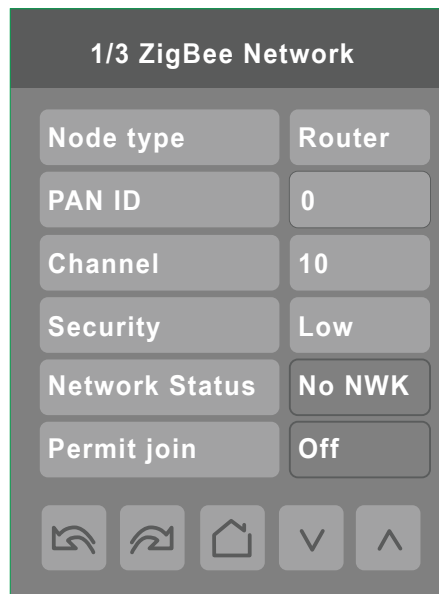

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Node type Default: Router	Node Type Sets device to act as Router or Coordinator in a network. Coord.: Creates the network and manages the binding of wireless devices. Router: Joins a network created by a coordinator (Coordinator permit join must be set to 'ON'). Choices: Coord. or Router
PAN ID Default value: 0	Zigbee Pan ID Personal Area Network Identification that links specific Room Controllers to specific Zigbee coordinators. For every Room Controller reporting to a coordinator, set the SAME PAN ID value both on the coordinator and the Room Controller. Note: The default value of 0 is NOT a valid PAN ID and causes Zigbee to be disabled. Range: 1 to 65535
Channel Default value: 10	Zigbee Channel The channel (wireless frequency) on which the Zigbee network transmits and receives data. The channel of the Coordinator must match that of the routers to exchange data. The default value of 10 is NOT a valid channel and causes Zigbee to be disabled. The valid range of available channels is from 11 to 25. Using channels 15, 20, and 25 is recommended. Channel 25 is considered as being the best one because it is furthest from the Wi-Fi channels. Range: 10 to 25

Configuration Parameters Default Value	Significance and Adjustments
<p>Security Default value: Low</p>	<p>Security Levels</p> <p>Note: Changing between Zigbee Security levels does not require re-creating the Zigbee network, or re-commissioning sensors.</p> <p>Low: Disables new security features in Zigbee 3.0 to be fully backwards compatible with Zigbee Home Automation 1.2 devices, and therefore compatible with all of our sensors.</p> <p>Normal: Enables the typical new features of Zigbee 3.0. This means that legacy Zigbee Home Automation 1.x devices cannot join a Normal security network. Compatible with the following sensors:</p> <ul style="list-style-type: none"> • SED-WDS-P-5045 • SED-WDC-G-5045 • SED-CMS-P-5045 • SED-WMS-P-5045 • SED-MTH-G-5045 • SED-TRH-G-5045 • SED-C02-G-5045 <p>High: Enables the Zigbee 3.0 high security network joining. The high security level will encrypt the initial network key transport from the network coordinator to the joining Room Controller. This will protect the joining process from eavesdropping attacks (also known as sniffing or snooping attacks). Your network coordinator, such as a BMS server or controller, must be compatible with the Zigbee 3.0 standard. To start the network join, the Room Controller's IEEE address and install code must be transferred to the network coordinator (refer to "Zigbee Network 3/3" on page 23).</p> <p>Note: Before starting the network join, make sure to set the PAN ID and set the Node type to Router. High security is supported only when the Node Type is set to Router, it is disabled when the Node type is set to Coordinator.</p> <p>Important! Selecting the Normal Security option will result in the removal of legacy sensors from the network.</p> <p>Choices: Low, Normal or High</p>
<p>Network Status Read Only MSI2</p>	<p>Zigbee Network Status</p> <p>Shows the current status of the Zigbee network.</p> <p>Not det.: Zigbee module not detected Pwr on: Zigbee module detected but not configured No NWK: ZigBee configured but no network joined Joined: ZigBee network joined Online: Communicating (Exchanging data)</p> <p>Display Readings: 1=Not det., 2=Pwr on, 3=No NWK, 4=Joined, 5=Online</p>
<p>Permit join Default value: Off</p>	<p>Permit Join</p> <p>Changing this value to "Off" on the Coordinator prevents any new Zigbee devices from joining the network.</p> <p>Permit join can be On/Off when the Room Controller is a Coordinator, however the parameter is read only when the Room Controller is a router. If not set to off manually the Permit join will stay On for 3 hours.</p> <p>Choices: On or Off</p>

ZIGBEE NETWORK 2/3




PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
COM address Default value: 254 AV10	COM Address Room Controller networking address. For wireless models, the use of the COM address is not mandatory. The COM address is an optional way to identify a device on the network and is recommended if used with a BMS. It is Mandatory for BACnet. Range: 0 to 254
Short address Default value: 0 Read Only	Zigbee Short Address The unique Zigbee short address is generated once a wireless device joins a Zigbee network.
IEEE address Read Only CSV10	Zigbee IEEE Address The extended IEEE address (MAC address) is a unique worldwide identifier of the onboard Zigbee or optional Zigbee add-on module.
Zigbee revision Read Only CSV9	Zigbee Firmware Revision Shows the Zigbee firmware revision number.

ZIGBEE NETWORK 3/3

The 3/3 Zigbee Network screen shows only when the security level is set to high.

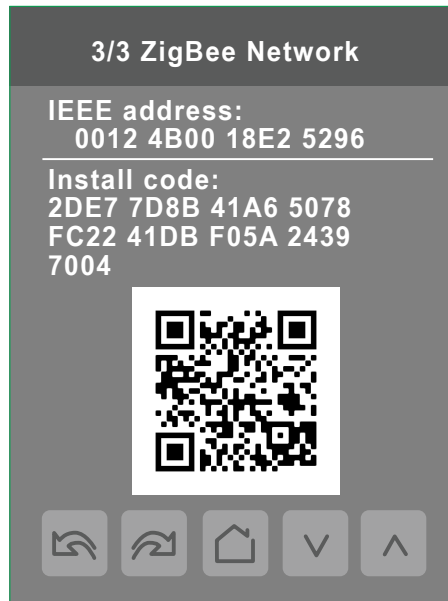

PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
IEEE address Read Only CSV10	Zigbee IEEE Address The extended IEEE address (MAC address) is a unique worldwide identifier of the onboard Zigbee or optional Zigbee add-on module.
Install code Read Only	Install Code The install code is used as a shared key to make an initial secure connection between the network coordinator and the Room Controller when joining the Zigbee 3.0 high security network (refer to "Security Levels" on page 21). Once the Room Controller has successfully joined the network, a new key is created for future secure connections. The install code contains a key of 16-byte hexadecimal numbers plus a 2-byte cyclic redundancy check (CRC) code at the end. Warning: To maximize security, a new random install code is generated each time the Room Controller is power cycled, or its Zigbee settings are changed. Make sure to set the Zigbee PAN ID and set the Security Level to High before transferring the Install Code.
QR code Read Only	QR Code The QR code provides an easy way to transfer the Room Controller's IEEE address and install code to the network coordinator. The QR code format is defined by the Zigbee 3.0 standard. The QR code is scanned with the mobile app for your gateway commissioning software. If your software does not support QR code data transfer, you can read the IEEE address and install code and enter them into a web page or provide them over the phone to the system administrator. Format: Z\$A:{IEEE address}\$I:A{Install code}

BACNET NETWORK SETTINGS

BACnet network screen shows when BACnet MS/TP is selected in wired protocol parameter.

1/2 BACnet Network

COM address	254
Network units	SI
Network lang.	English
Baud rate	Auto
BACnet status	Offline
BACnet PRate	4



PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
COM address Default value: 254 AV10	COM Address Room Controller networking address. Default value of 254 disables BACnet communication for the Room Controller. Range: 0 to 254
Network units Default value: SI MV6	Network Units Network units transmitted over the BACnet network. NOTE: Use the Temperature scale parameter to change the display units locally on the Room Controller. Imperial: Network units shown as Imperial units. SI: Network units shown as International Metric units. Choices: 1=SI, 2=Imperial
Network lang. Default value: English MV7	Network Language Network language/object names transmitted over network. Choices: 1=English, 2=French, 3=Spanish
Baud rate Default value: Auto MV8	BACnet Baud Rate Leave the value at Auto unless instructed otherwise as this automatically detects BACnet baud rate. Choices: 1=9600, 2=19200, 3=38400, 4=57600, 5=76800, 6=115200, 7=Auto
BACnet status Read Only	BACnet Status Read Only value shows if a BACnet Network is detected or not. Display Readings: Online or Offline
BACnet PRate Default value: 4 AV16	BACnet Stack Poll Rate Rate at which a BACnet stack is processed, in milliseconds. Range: 1 to 5

BACNET INSTANCE NUMBER

The default BACnet instance number is generated by the model number and COM address of the Room Controller. For example, the instance number of a VTR8350A5500BP with a COM address of 57 is generated as “83057”.

The default instance number appears first. To change the instance number, use number pad and press **Accept and save**.

Tap “R” icon to reset to automatic instance addressing.

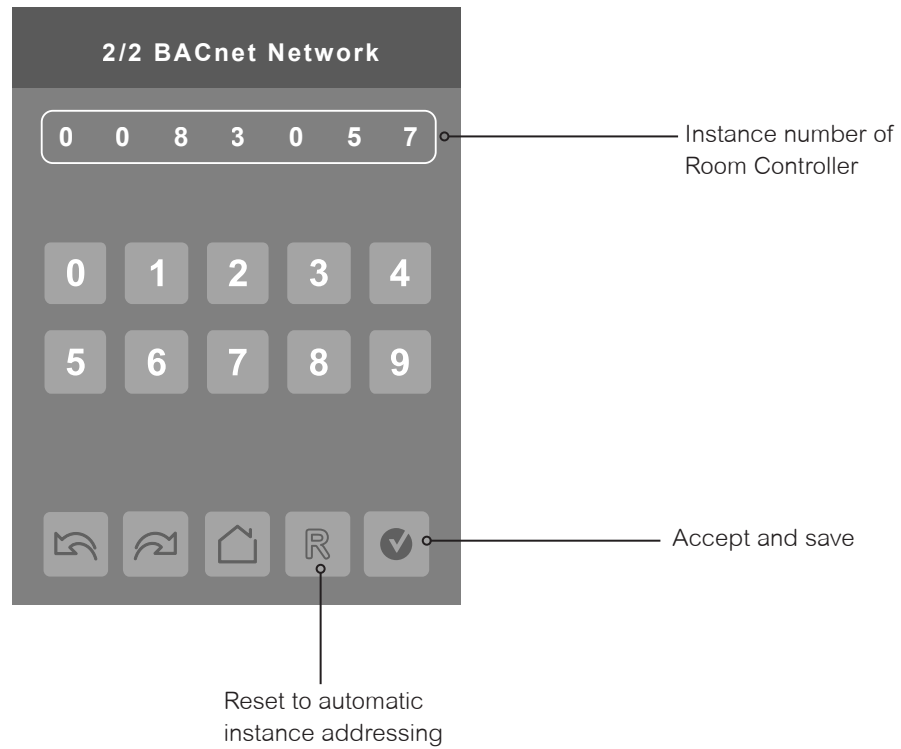

MODBUS NETWORK SETTINGS


Modbus network screen shows when Modbus is selected in wired protocol parameter.

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Comm address Default value: 254	Communication Address Valid address range is set at 1 to 247 and each Modbus device must have a unique address. Other values not recommended for Modbus. Default value of 254 disables Modbus communication for the Room Controller. Range: 0 to 254
Network units Default value: SI	Measurement Units Network units transmitted over the Modbus network. NOTE: Use the Temperature scale parameter to change the display units locally on the Room Controller. Imperial: network units shown as Imperial units. SI: network units shown as International Metric units. Choices: Imperial or SI
Baud rate Default value: 19200	Modbus Baud Rate Automatically detects Modbus baud rate. Choices: 57600, 38400, 19200, 9600 and 4800
Parity Default value: Even	Parity Determines how the parity bit of the character's data frame is set to detect any errors in the sent/receives frame. Choices: None, Odd and Even

Wi-Fi 1/5

The Wi-Fi Network screen shows only in models with optional Wi-Fi module (VCM8002).

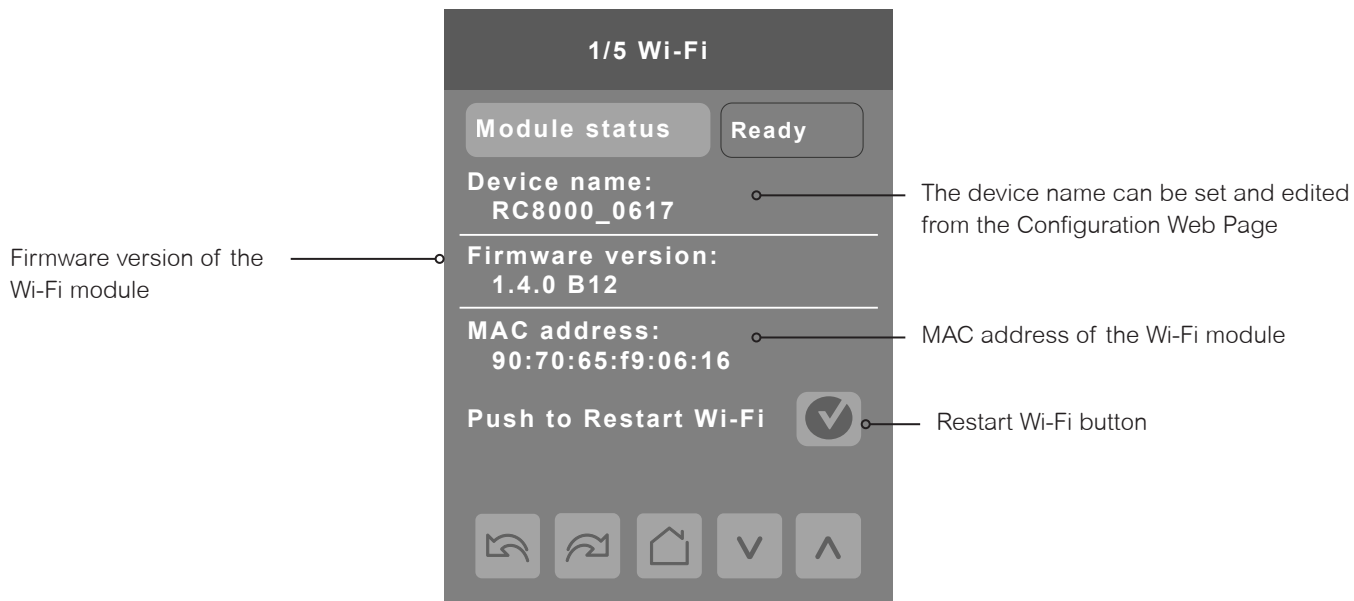

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Module status Read Only MSI315	Wi-Fi Module status Displays the current status of the Wi-Fi module. It would normally display Ready when the Wi-Fi module is operational. Status value: 1=Offline, 2=Initializing, 3=Ready, 4=Booting, 5=Resetting, 6=Fail, 7=Testing
Device Name Read only CSV4	Wi-Fi Device Name The device name can be set and edited from the Configuration Web Page.
Firmware version Read only CSV5	Wi-Fi Firmware Version Shows the Wi-Fi Module firmware revision number.
MAC address Read only CSV6	MAC Address The MAC address is a unique hardware identifier of the Wi-Fi Module.

Wi-Fi 2/5

The Password needed to connect to the Access Point Wi-Fi network




The SSID of the Access Point created by the Wi-Fi module. You can add your device to this network to access the Configuration Web Page

When connected to the Access Point, browse to this IP address to access the Configuration Web Page

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Access point Default value: Disabled	Access Point On this screen the access point can be enabled or disabled as needed. Choices: Enabled or Disabled

Wi-Fi 3/5

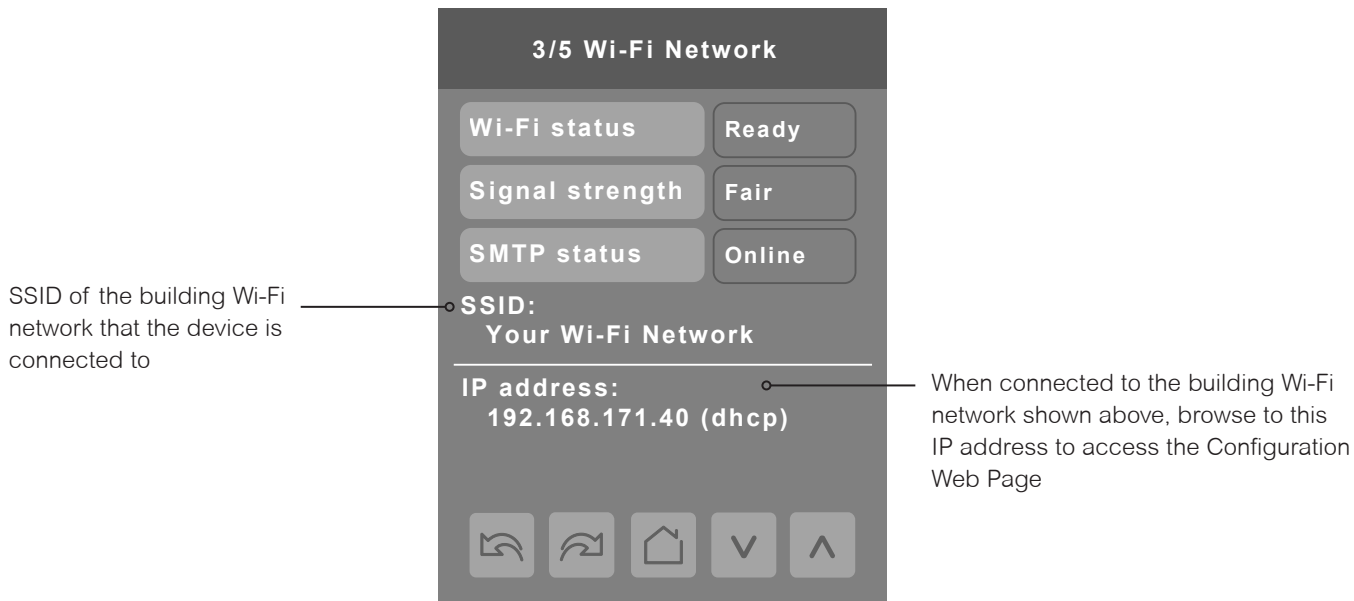

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Wi-Fi status Read Only MSI316	Wi-Fi Status When not connected to a Wi-Fi network the status remains Idle. Once the RC is on your preferred Wi-Fi network, the status will be displayed as Ready. Status value: 1=Idle, 2=Associate, 3=Config., 4=Ready, 5=Online, 6=Disconn., 7=Failure
Signal strength Read Only MSI327	Wi-Fi Network Signal Strength Signal strength of the Wi-Fi network. Range: 1=Unknown, 2=Weak, 3=Fair, 4=Good, 5=Excellent
SMTP status Read Only MSI318	SMTP Server Status Status of the email SMTP server. Email notifications are enabled and configured from the Configuration Web Page. Status value: 1=Unknown, 2=Disabled, 3=Offline, 4=Online
SSID Read only CSV7	Wi-Fi Network SSID SSID of the building Wi-Fi network that the device is connected to. The SSID is set from the Configuration Web Page.
IP address Read only CSV8	Wi-Fi Network IP Address When connected to the building Wi-Fi network shown above, browse to this IP address to access the Configuration Web Page.

Wi-Fi 4/5



PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Facility Expert Read Only MSI319	Facility Expert Enabled Shows whether the Facility Expert system is Disabled or Enabled. Status value: 1=Disabled, 2=Enabled
Status Read Only MSI323	Facility Expert Status Shows the current status of the Facility Expert system. Range: 1=Disabled, 2=Offline, 3=Connect., 4=Online, 5=Failure, 6=Unknown
Last communication time Read Only	Last Communication Time
MAC address Read only CSV6	MAC Address The MAC address is a unique hardware identifier of the Wi-Fi Module.

Wi-Fi 5/5




PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
<p>Factory reset? Default value: No</p>	<p>Erase All</p> <p>Accepting Yes for both and then tapping 'Push to accept' will restore the Wi-Fi module to the factory settings, erase all configuration data and revert the Wi-Fi Module Firmware to the factory firmware version.</p> <p>NOTES:</p> <ul style="list-style-type: none"> • If you lose or forget your password for the Configuration Web Page, you must do a Factory Reset of the Wi-Fi module. • If your Wi-Fi module was connected to Facility Expert, you will need to contact your Facility Expert Administrator before the device can be reconnected after a Factory Reset.
<p>Are you sure? Default value: No</p>	

Wi-Fi BACNET NETWORK SETTINGS

BACnet network screens are shown when the wired protocol is set to BACnet or a Wi-Fi module is installed with BACnet/IP enabled. Only one BACnet protocol can be used at a time, either the wired protocol BACnet MS/TP (BACnet Network screens), or the Wi-Fi BACnet IP (Wi-Fi screens). BACnet/IP is enabled from the Configuration Web Page or the Uploader Tool. BACnet object name, instance number and range: BACnet IP Status, MSI317, 1=Disabled, 2=Enabled.

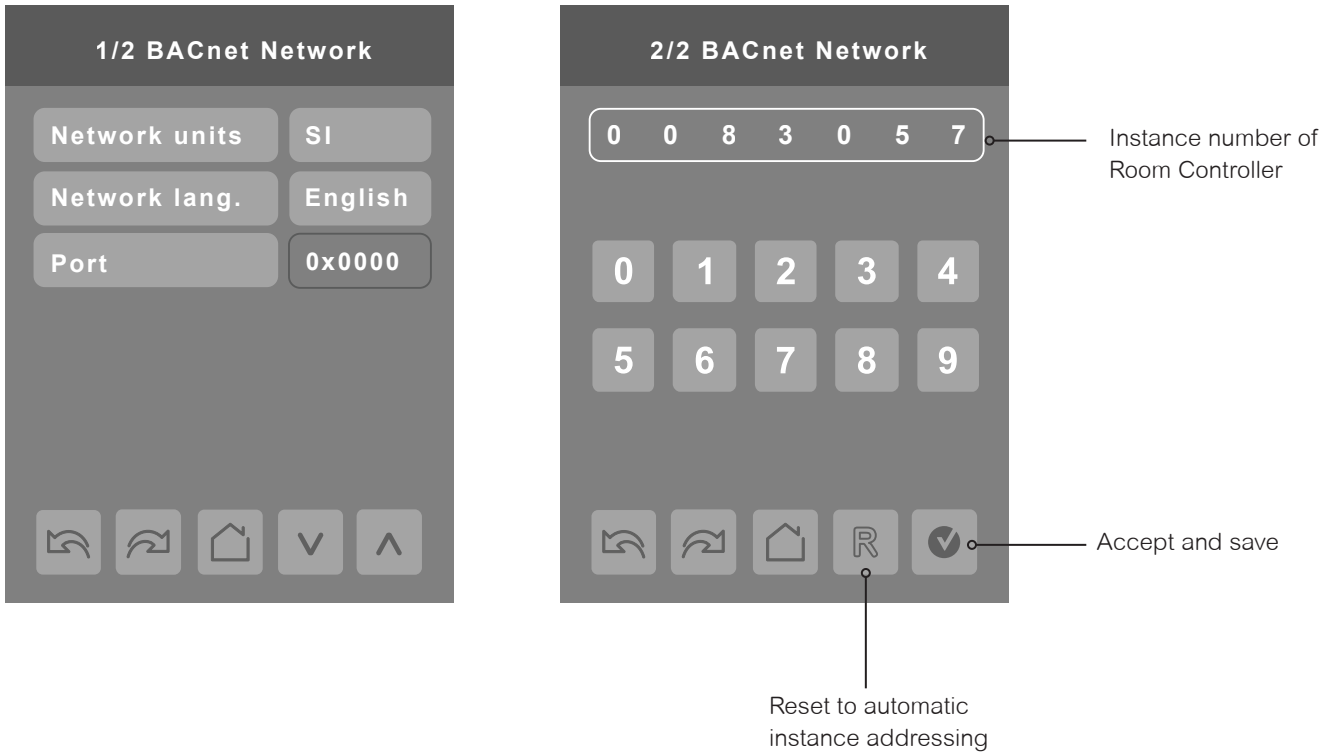

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Network units Default value: SI MV6	Network Units Network units transmitted over the BACnet network. NOTE: Use the Temperature scale parameter to change the display units locally on the Room Controller. SI: Network units shown as International Metric units. Imperial: Network units shown as Imperial units. Choices: 1=SI, 2=Imperial
Network lang. Default value: English MV7	Network Language Network language/object names transmitted over network. Choices: 1=English, 2=French, 3=Spanish
Port Default value: 0 Read Only	Port The unique short address of Wi-Fi BACnet IP

BACNET INSTANCE NUMBER


The default BACnet instance number is generated by the model number and COM address of the Room Controller. For example, the instance number of a VTR8350A5500BP with a COM address of 57 is generated as “83057”.

The default instance number appears first. To change the instance number, use number pad and press **Accept and save**. The BACnet instance number can also be changed from the Configuration Web Page or the Uploader Tool.

Tap “R” icon to reset to automatic instance addressing.

Configuration Screens

CONFIGURATION 1/9

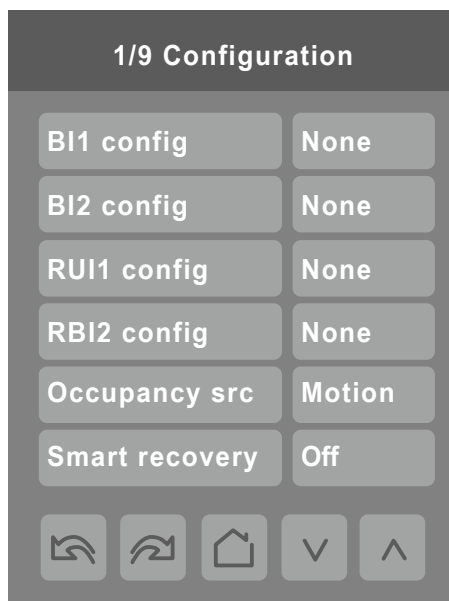


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
BI1 config Default value: None MV46	BI1 Configuration <p>None: No function will be associated with the input. Input can be used for remote network monitoring.</p> <p>Rem NSB: Remote night setback (NSB) timer clock input. The scheduling gets set as per the binary input and provides low cost setback operation via a dry contact</p> <p>Motion NO and Motion NC: Advanced PIR occupancy functions using a Normally Open (NO) or Normally Closed (NC) remote PIR motion sensor.</p> <p>Window: Forces system to disable any current heating or cooling action by Room Controller when window is open.</p> <p>Choices: 1=None, 2=Rem NSB, 3=Motion NO, 4=Motion NC, 5=Window</p>
BI2 config Default value: None MV47	BI2 Configuration <p>None: No function associated with input</p> <p>Door Dry: Room Controller goes to standby mode when door is opened then closed followed by no presence detection for the next 10 seconds</p> <p>Override: If the local PIR is used in this application, "Occupancy Command" (refer to "Options" on page 69) must be set to "Local Occupancy" and "Occupancy Source" (refer to page 34) must be set to "Motion".</p> <p>Choices: 1=None, 2=Door Dry, 3=Override</p>

Configuration Parameters Default Value	Significance and Adjustments
RUI1 config Default value: None MV82	RUI1 Configuration None: No function associated with the input. Input can be used for remote network monitoring. Filter: "Filter alarm" shows on Room Controller screen when input is energized. Service: "Service alarm" shows on Room Controller screen when input is energized. COC/NH: change over dry contact(normally heat). Used for hot/cold water or air change over switching in 2 pipe systems. COC/NC: change over dry contact (normally cool). Used for hot/cold water or air change over switching in 2 pipe systems. COS: change over sensor. Used for hot/cold water or air changeover switching in 2 pipe systems. Choices: 1=None, 2=Filter, 3=Service, 4=COC/NH, 5=COC/NC, 6=COS
RBI2 config Default value: None MV83	RBI2 Configuration None: No function associated with input. Input can be used for remote network monitoring. Filter: "Filter alarm" shows on Room Controller screen when input is energized. Service: "Service alarm" shows on Room Controller screen when input is energized. Choices: 1=None, 2=Filter, 3=Service
Occupancy src Default value: Motion MV110	Occupancy Source Motion: Occupancy status received from motion sensor. Schedule: Occupancy status determined by the schedule. Mot. Occ: Occupied when scheduled occupied AND when motion is detected. Mot. Unoc: Occupied when scheduled occupied OR when motion is detected. Choices: 1=Motion, 2=Schedule, 3=Mot. Occ., 4=Mot. Unoc.
Smart recovery Default value: Off MV71	Enable Smart Recovery Off: No smart recovery. The occupied schedule time is the time at which the system will restart. On: Smart recovery active. The occupied schedule time is the time at which the desired occupied temperature will be attained. The Room Controller automatically optimizes the equipment start time. In any case, the latest a system will restart is 10 minutes prior to the occupied period time. Smart recovery is automatically disabled if BI1 is configured to remote NSB. Choices: 1=Off, 2=On


CONFIGURATION 2/9

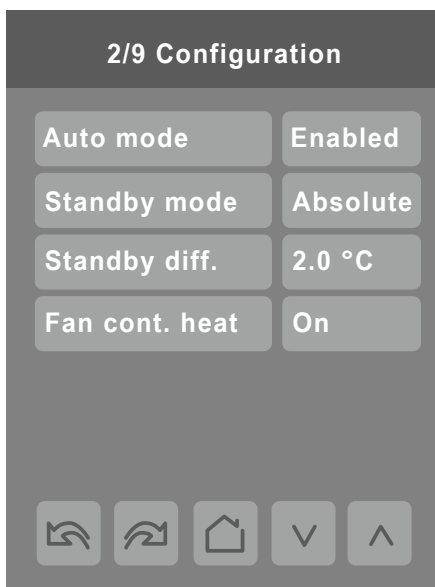

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Auto mode Default value: Enabled MV50	Auto Mode Enable Enables auto function for the mode button. For sequences 2, 4, and 5 only Disabled: Auto not active (Off-Cool-Heat) Enabled: Auto active (Off-Cool-Heat-Auto) Choices: 1=Disabled, 2=Enabled
Standby mode Default value: Absolute MV11	Standby Mode Configuration Standby setpoints used for control. Absolute: Standby entered values are used for standby mode. Offset: Occupied setpoints +/- Standby diff. used for standby mode. Choices: 1=Absolute, 2=Offset
Standby diff. Default value: 4°F (2.0°C) AV46	Standby Temperature Differential When Standby mode is set to 'offset', standby setpoints are calculated as follows: Standby cool: Cool setpoint + Standby diff. Standby heat: Heat setpoint - Standby diff. Refer to "Setpoints Screens" on page 49 to define Standby cool and Standby heat values. Range: 1 to 5°F (0.5 to 2.5°C), using 1.0 °F (0.5 °C) increments.
Fan cont. heat Default value: On MV95	Fan Control in Heating Mode On: Heat source is inside the FCU, room controller activates the fan upon a call for heat. Off-Auto: Heat source is outside the FCU, room controller does not enable the fan upon a call for Heat if "Fan Mode" is set to "Auto". If "Fan Mode" is set to L, M or H room controller will activate selected speed, even upon a call for Heat. Off-All: Heat source is outside the FCU, room controller will force the fan off upon a call for Heat Choices: 1=On, 2=Off-Auto, 3=Off-All

CONFIGURATION 3/9

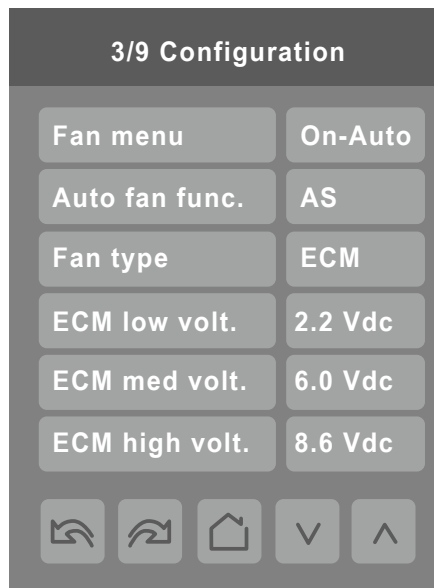

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Fan menu Default value = On-Auto MV57	Fan Sequence Fan Sequence configuration applies to “3 speed” and “ECM” fan type The selected fan sequence in this menu dictates the Fan button options displayed on the Home screen of the room controller. L-M-H: 3-Speed configuration L-H: 2-Speed configuration L-M-H-A: 3-Speed configuration with Auto fan speed. Auto Mode operation is dependent on Auto Fan parameter. L-H-A: 2-Speed configuration with Auto fan speed mode. Auto Mode operation is dependent on Auto Fan parameter. On-Auto: Single Speed configuration. Auto selection will activate fan on demand. On selection will keep the fan On in occupied, standby and override mode, and will activate fan based on demand in unoccupied mode. Choices: 1=L-M-H, 2=L-H, 3=L-M-H-A, 4=L-H-A, 5= On-Auto
Auto fan func. Default value: AS MV66	Automatic Mode Fan Function Fan Sequence configuration applies to “3 speed” and “ECM” fan type Auto Speed Fan Mode operation for Fan Menu (L-M-H-A) or (L-H-A). AS: In Occupied, Standby and Override modes, the Fan stays ON at low speed even if there is no demand for Heating or Cooling. In Unoccupied mode the Fan turns Off when there is no demand for Heating or Cooling. AS/AD: In any Occupancy mode, the Fan turns Off all speeds when there is no demand for Heating or Cooling. Choices: 1=AS, 2=AS/AD

Configuration Parameters Default Value	Significance and Adjustments
Fan type Default value: 3 speed MV154	Fan Type Fan type configuration determines the fan control method for the fan coil unit 3 Speed: Fan control using 3 binary outputs (Low, Medium, High) ECM: Fan control using 0-10 VDC Modulating output. Choices: 1=3 speed, 2=ECM
ECM low volt. Default value: 2.2 Vdc AV212	ECM Fan Low Voltage Point only displayed if “Fan control” is set to “ECM” Voltage to be applied on 0-10V output when Low fan speed is selected. Range: 2.0 to 4.0 Vdc, using 0.1 Vdc increments
ECM med. volt. Default value: 6.0 Vdc AV213	ECM Fan Medium Voltage Point only displayed if “Fan control” is set to “ECM” Voltage to be applied on 0-10V output when Low fan speed is selected. Range: 4.1 to 7.0 Vdc, using 0.1 Vdc increments
ECM high volt. Default value: 8.6 Vdc AV214	ECM Fan High Voltage Point only displayed if “Fan control” is set to “ECM” Voltage to be applied on 0-10V output when Low fan speed is selected. Range: 7.1 to 10.0 Vdc, using 0.1 Vdc increments

CONFIGURATION 4/9

4/9 Configuration

Standby time	0.5 hrs
Unocc. time	0.0 hrs
Temp. occ. time	2.0 hrs
Deh. hysteresis	5 %RH
Deh. max. cool	100 %
Deh. lockout	Disabled

↶
↷
🏠
▼
▲

PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
Standby time Default: 0.5 hours AV67	Standby Time Time delay between the moment where the PIR cover detects last movement in the area, and the time which the Room Controller stand-by setpoints become active. Note: This parameter is not active when the “Door” function is used (wired or wireless). Range: 0.5 to 24.0 hours (0.5 hour increments)
Unocc. time Default: 0.0 hours AV68	Unoccupied Time Time between the moment where the Room Controller toggles to stand-by mode, and the time which the Room Controller unoccupied mode and setpoints become active. Note: Default value of 0.0 hours disables the unoccupied timer. This prevents the Room Controller from being able to switch from stand-by mode to unoccupied mode when PIR functions are used. Range: 0.0 to 24.0 hours (0.5 hour increments)
Temp. occ. time Default value: 2 hours AV62	Temporary Occupancy Time The time the Room Controller stays in override mode before reverting back to unoccupied mode. When the Room Controller is in unoccupied mode, pressing the on-screen Override icon or closing the contact on BI2, configured as “Remote Override”, sets the Room Controller to Override mode for defined time period, and uses the Occupied Cooling and Heating setpoints. Range: 0.0 to 24.0 hours

Configuration Parameters Default Value	Significance and Adjustments
Deh. hysteresis Default value: 5 % RH AV72	Humidity Control Hysteresis Used only if dehumidification sequence is enabled. Range: 2 to 20% RH
Deh. max. cool. Default value: 100 % AV73	Dehumidification Maximum Cooling Limit Maximum cooling valve position when dehumidification is enabled. This can be used to balance smaller reheat loads installed in regards to the capacity of the cooling coil. Range: 20 to 100 %
Deh. lockout Default value: Disabled MV13	Dehumidification Lockout Enables or disables dehumidification based on central network requirements from the BAS front end. Disabled: Dehumidification Not Authorized Enabled: Dehumidification Authorized Choices: 1=Disabled, 2=Enabled

CONFIGURATION 5/9

5/9 Configuration

Cooling CPH	4
Heating CPH	4
Cooling valve	NO
Heating valve	NO
Setpoint func.	Attach SP
Mode button	Normal



PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Cooling CPH Default value: 4 CPH AV85	Cooling CPH Cooling Output Cycles Per Hour CPH is used to “modulate” On/Off outputs controlling equipment such as valves. When the Room Temperature is within the Proportional Band, the output performs 3 to 8 CPH. A higher CPH represents a higher accuracy of control at the expense of wearing mechanical components faster. Range: 3 to 8 CPH
Heating CPH Default value: 4 CPH AV84	Heating CPH Heating Output Cycles Per Hour CPH is used to “modulate” On/Off outputs controlling equipment such as valves. When the Room Temperature is within the Proportional Band, the output performs 3 to 8 CPH. A higher CPH represents a higher accuracy of control at the expense of wearing mechanical components faster. Range: 3 to 8 CPH
Cooling valve Default value: NC MV87	Cooling Valve Sets the type of valve used for cooling. NO: Valve normally opened when no power is present NC: Valve normally closed when no power is present Choices: 1=NO, 2=NC
Heating valve Default value: NC MV86	Heating Valve Sets the type of valve used for heating. NO: Valve normally opened when no power is present NC: Valve normally closed when no power is present Choices: 1=NO, 2=NC

Configuration Parameters Default Value	Significance and Adjustments
<p>Setpoint func. Default value: Attach SP MV58</p>	<p>Setpoint Function</p> <p>Local setpoint settings to set the local setpoint interface for the User.</p> <p>Dual SP: “Minimum” Deadband, Heat and Cool Setpoints can be adjusted independently.</p> <p>Attach SP: “Fixed” Deadband in occupied mode, Heat and Cool setpoints always follow each other, separated by Deadband value (acts like a single setpoint).</p> <p>Choices: 1=Dual SP, 2=Attach SP</p>
<p>Mode button Default value: Normal MV111</p>	<p>Mode Button</p> <p>Changes the system mode button functionality and hides/shows temperature setpoints on main screen.</p> <p>Normal: System mode button switches between ‘Off’, ‘Auto’, ‘Cool’ and ‘Heat’. Also displays temperature Setpoints on main screen.</p> <p>Off-Auto: System mode button switches between ‘Off’ and ‘Auto’. Hides temperature Setpoints on main screen.</p> <p>NOTE: Setting ‘Mode button’ to ‘Off-Auto’ forces the ‘Setpoint func.’ parameter to ‘Attach SP’.</p> <p>Choices: 1=Normal, 2=Off-Auto</p>

CONFIGURATION 6/9

6/9 Configuration

Prop. band	3.0
Pulsed heat	Off
No. of pipes	2
Operation seq.	Cool/Heat
Purge sample	2.0 hrs
Purge open	2 min


↶
↷
🏠
▼
▲

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments																														
Prop. band Default value: 3.0 AV65	Proportional Band Adjusts proportional band used by Room Controller PI control loop. Note: Default value of 3 gives satisfactory operation in most normal installation cases. The use of a superior proportional band different than the factory value is normally warranted in applications where Room Controller location is problematic and leads to unwanted cycling of the unit. A typical example is a wall mounted Room Controller installed between return and supply air feeds and is directly influenced by the supply air stream of unit. Range: 3 to 10 <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr style="background-color: #008000; color: white;"> <th style="width: 30%;">Value</th> <th colspan="2">Effective Proportional Band</th> </tr> <tr> <td></td> <th style="width: 35%;">Fahrenheit</th> <th style="width: 35%;">Celsius</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">3.0</td><td style="text-align: center;">3</td><td style="text-align: center;">1.2</td></tr> <tr><td style="text-align: center;">4.0</td><td style="text-align: center;">4</td><td style="text-align: center;">1.7</td></tr> <tr><td style="text-align: center;">5.0</td><td style="text-align: center;">5</td><td style="text-align: center;">2.2</td></tr> <tr><td style="text-align: center;">6.0</td><td style="text-align: center;">6</td><td style="text-align: center;">2.8</td></tr> <tr><td style="text-align: center;">7.0</td><td style="text-align: center;">7</td><td style="text-align: center;">3.3</td></tr> <tr><td style="text-align: center;">8.0</td><td style="text-align: center;">8</td><td style="text-align: center;">3.9</td></tr> <tr><td style="text-align: center;">9.0</td><td style="text-align: center;">9</td><td style="text-align: center;">5.0</td></tr> <tr><td style="text-align: center;">10.0</td><td style="text-align: center;">10</td><td style="text-align: center;">5.6</td></tr> </tbody> </table>	Value	Effective Proportional Band			Fahrenheit	Celsius	3.0	3	1.2	4.0	4	1.7	5.0	5	2.2	6.0	6	2.8	7.0	7	3.3	8.0	8	3.9	9.0	9	5.0	10.0	10	5.6
Value	Effective Proportional Band																														
	Fahrenheit	Celsius																													
3.0	3	1.2																													
4.0	4	1.7																													
5.0	5	2.2																													
6.0	6	2.8																													
7.0	7	3.3																													
8.0	8	3.9																													
9.0	9	5.0																													
10.0	10	5.6																													

Configuration Parameters Default Value	Significance and Adjustments																					
Pulsed heat Default value: Off MV90	Pulsed Heating VDC output configuration (VC3000 series model dependent) Off: Regular On-Off control for VC350xE models only. Can be used with 2 & 4 pipes applications. On: VDC SSR electric heat 10 second pulsed time base modulation for VC340xE models only. Can only be used with 2 pipes system only. Occ Out: VDC Occupancy output follows local device occupancy for VC3514E model only. <ul style="list-style-type: none"> • Occupied & Temporary Occupied = Contact closed • Stand-By & Unoccupied = Contact opened Choices: 1=Off, 2=On, 3=Occ Out																					
No. of pipes Default: 2 AV52	Number of Pipes Defines the type of system installed. Choices: 2 or 4																					
Operation seq. Default: Heat only MV15	Sequence of Operation Selects the initial sequence of operation required by the installation type and the application. <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="background-color: #008000; color: white;">Mode</th> <th colspan="2" style="background-color: #008000; color: white;">Number of Pipes</th> </tr> <tr> <th></th> <th>2 Pipe</th> <th>4 Pipe</th> </tr> </thead> <tbody> <tr> <td>Cool only</td> <td>Cooling only</td> <td>Cooling only</td> </tr> <tr> <td>Heat only</td> <td>Heating only</td> <td>Heating only</td> </tr> <tr> <td>Cool/Heat</td> <td>Cooling with electric reheat</td> <td>Heating / Cooling</td> </tr> <tr> <td>Heat-Rht</td> <td>Heating with electric reheat</td> <td>---</td> </tr> <tr> <td>Reheat</td> <td>Electric reheat only</td> <td>---</td> </tr> </tbody> </table> <p>For 2 Pipe output applications, the system access is limited if RUI1 is configured for local changeover COS, COC/NC or COC/NC. The current water temperature detected by the RUI1 limits the system mode available for the local configuration or network write. For sequence "electric reheat", set PulsedHt to "On" to enable pulsed electric reheat applications with VC3400E & VC3404E.</p> Choices: 1=Cool only, 2=Heat only, 3=Cool/Heat, 4=Heat-Rht, 5=Reheat	Mode	Number of Pipes			2 Pipe	4 Pipe	Cool only	Cooling only	Cooling only	Heat only	Heating only	Heating only	Cool/Heat	Cooling with electric reheat	Heating / Cooling	Heat-Rht	Heating with electric reheat	---	Reheat	Electric reheat only	---
Mode	Number of Pipes																					
	2 Pipe	4 Pipe																				
Cool only	Cooling only	Cooling only																				
Heat only	Heating only	Heating only																				
Cool/Heat	Cooling with electric reheat	Heating / Cooling																				
Heat-Rht	Heating with electric reheat	---																				
Reheat	Electric reheat only	---																				
Purge sample Default: 2.0 hrs AV5	Purge Sample Period Time interval between valve samples. Will open valve for a short period adjusted by "Purge open" parameter to sample pipe temperature to decide between heating or cooling mode. Adjustable: 0.0 to 4.0 hours (0 hours disables the function)																					
Purge open Default: 2 min AV6	Purge Open Time the valve opens to sample pipe temperature to decide between heating or cooling mode. Adjustable: 1 to 3 minutes																					

CONFIGURATION 7/9

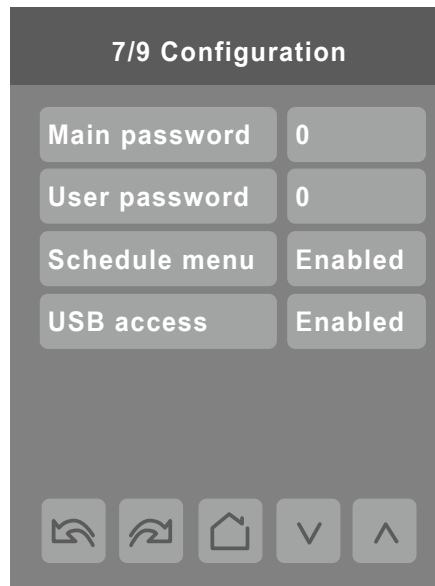

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Main password Default value: 0 AV56	Main Password Sets a protective access password to prevent unauthorized access to configuration menu parameters. A default value of "0" will not prompt for a password or lock access to the configuration menu. Range: 0 to 9999.
User password Default value: 0 AV57	User Password Sets a protective access password to prevent User unauthorized access to main screen adjustments. A default value of "0" will not prompt for a password. Range: 0 to 9999.
Schedule menu Default value: Enabled MV73	Schedule Menu Toggles activation of schedule menu direct access. Disabled: Schedule Menu can only be accessed through the Setup Menu screens. Enabled: Schedule Menu is directly accessible from the main screen via a touch in the upper corner. Dis. no. clk: Schedule Menu can only be accessed through the Setup Menu screens. Clock does not show. En. no. clk: Schedule Menu is directly accessible from the main screen via a touch in the upper corner. Clock does not show. Choices: 1=Disabled, 2=Enabled, 3=Dis.no.clk, 4=En.no.clk

Configuration Parameters Default Value	Significance and Adjustments
<p>USB access Default value: Enabled</p>	<p>USB Access</p> <p>Enables/disables USB communication with the Room Controller (RC).</p> <p>Enabled: USB communication with the RC is enabled, so the Uploader tool can be used to upgrade firmware, standby images, Lua script etc.</p> <p>Disabled: USB communication with the RC is disabled, so the Uploader tool cannot be used with the device.</p> <p>Choices: Enabled, Disabled</p>

NOTICE


UNAUTHORIZED ACCESS

When commissioning is complete, it is recommended to minimize access points on the Room Controller:

- Disable USB access via the Configuration screen or Commissioning via USB on the Admin tab of the Configuration Web Page
- Enable main password to lock the setup screens
- Enable user password to lock the main screen adjustments (optional)
- Lock the display screen (optional)
- Use strong and unique Wi-Fi Module admin password

Failure to follow these instructions may lead to unauthorized users accessing the Wi-Fi Module or the Room Controller.

CONFIGURATION 8/9

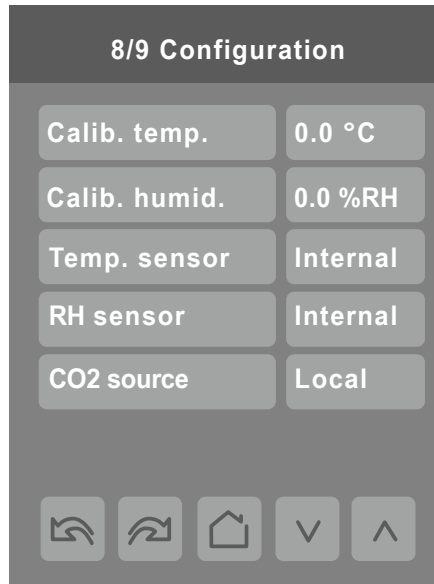


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Calib. temp. Default value: 0°F (0°C) AV7	Calibrate Room Temperature Sensor Room temperature sensor calibration. Offset can be added or subtracted to actual displayed room temperature. Range: ± 5.0°F (± 2.5°C)
Calib. humid. Default value: 0.0 %RH AV8	Calibrate Humidity Sensor Offset that can be added or subtracted to actual displayed humidity. Range: ± 15.0 %RH
Temp. sensor Default value: Internal MSI309, MV145	Room Temperature Sensor Sets the source of the indoor room temperature. This parameter allows the user to designate either the Room Controller or any of the paired wireless devices that support temperature to act as the source for the room temperature. Internal: sets the Room Controller as the source for the room temperature. WL IO: sets the selected Zigbee wireless device as the source for the room temperature. Only one device can be selected. WL 1 to WL 20: sets the selected Zigbee wireless device as the source for the room temperature. Only one device can be selected. Note: If the wireless sensor is disconnected or faulty, the Room Controller will automatically revert to its internal temperature sensor. Choices: 1=Wired, 2=Internal, 3= WL IO, 4 to 23=WL 1 to WL 20

Configuration Parameters Default Value	Significance and Adjustments
<p>RH sensor Default value: Internal MSI313, MV149</p>	<p>Relative Humidity Sensor</p> <p>Sets the source of the indoor room humidity. This parameter allows the user to designate either the Room Controller or any of the paired wireless devices that support humidity to act as the source for the room humidity.</p> <p>None: Relative Humidity source disabled. Internal: Sets the Room Controller as the source for the room humidity. WL 1 to WL 20: Sets the selected wireless Zigbee device as the source for the room humidity. Only one device can be selected.</p> <p>Choices: 1=None, 2=Internal, 3 to 22=WL 1 to WL 20</p>
<p>CO2 source Default value: Local MV150</p>	<p>CO2 Source</p> <p>Sets the source of the indoor CO2. This parameter allows the user to designate either the optional CO2 detection sensor module (VCM8001) or any of the paired wireless devices that support CO2 to act as the source for the room CO2.</p> <p>None: CO2 source disabled. Local: Sets the optional CO2 detection sensor module as the source for the room CO2. WL 1 to WL 20: Sets the selected Zigbee wireless device as the source for the room CO2. Only one device can be selected.</p> <p>Choices: 1=None, 2=Local, 3 to 22=WL 1 to WL 20</p>

CONFIGURATION 9/9

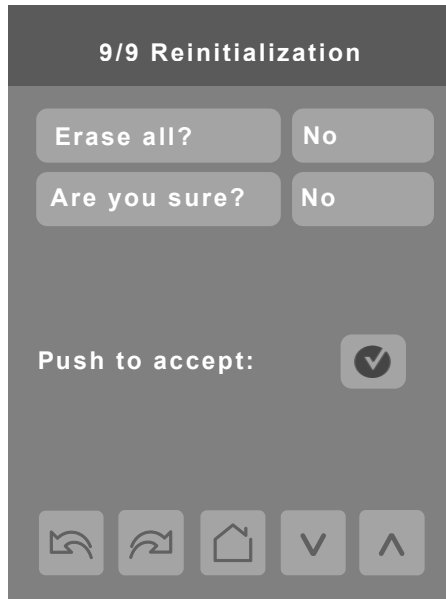

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
<p>Erase all? Default value: No</p>	<p>Erase All</p> <p>Accepting Yes for both and then tapping 'Push to accept' returns all values to the factory default settings with the exception of the following:</p> <ul style="list-style-type: none"> • COM address • Network Units • Network Language • Baud Rate • BACnet Instance • Device Name • Screen Contrast • Lua Script <p>Note: Node type in Zigbee Network screen returns to default value (Router).</p>
<p>Are you sure? Default value: No</p>	

Setpoints Screens

SETPOINTS 1/2



PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Unocc. cool Default value: 80°F (27°C) AV44	Unoccupied Cool Setpoint Cooling Temperature setpoint used by the Room Controller when in Unoccupied mode. Range: 54 to 100°F (12.0 to 37.5°C)
Standby cool Default value: 78 °F (25.5°C) AV42	Standby Cool Setpoint Cooling Temperature setpoint used by the Room Controller when in Standby mode. Range: 54 to 100°F (12.0 to 37.5°C)
Occ. cool Default value: 75°F (24°C) AV40	Occupied Cool Setpoint Cooling Temperature setpoint used by the Room Controller when in Occupied or Override mode. Range: 54 to 100°F (12.0 to 37.5°C)
Occ. heat Default value: 72°F (22°C) AV39	Occupied Heat Setpoint Heating Temperature setpoint used by the Room Controller when in Occupied mode. Range: 40 to 90°F (4.5 to 32.0°C)
Standby heat Default value: 69°F (20.5°C) AV41	Standby Heat Setpoint Heating Temperature setpoint used by the Room Controller when in Standby mode. Range: 40 to 90°F (4.5 to 32.0°C)
Unocc. heat Default value: 62°F (17°C) AV43	Unoccupied Heat Setpoint Heating Temperature setpoint used by the Room Controller when in Occupied or Override mode. Range: 40 to 90°F (4.5 to 32.0°C)

SETPOINTS 2/2





PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Default heat Default value: 72°F (22°C) AV45	Default Heating Setpoint <p>Used for hospitality applications in stand-alone mode only to reset the occupied setpoints when a new guest enters the room.</p> <p>When the Room Controller is in unoccupied mode, any movement detected by a wired, wireless or local PIR sensor changes the occupancy mode to occupied modes and uses the "Default Heating Setpoint" as the new occupied setpoints.</p> <p>NOTE: This functionality is only valid when Stand-by mode = Offset and "Setpoint Func" is set to "Attached".</p> <p>Range: 65 to 80 °F (18.5 to 26.5 °C)</p>
Min. deadband Default value: 3°F (1.5°C) AV63	Minimum Deadband <p>Temperature offset between the Cooling and Heating setpoints to ensure that Cooling setpoint is always warmer than the Heating setpoint.</p> <p>Cooling setpoint ≥ (Heating setpoint + Deadband)</p> <p>Range: 2 to 5°F (1.0 to 2.5°C)</p>
Max. heating Default value: 90°F (32°C) AV58	Heating Setpoint Limit <p>Maximum Occupied, Unoccupied, Standby and Override Heating setpoints limit.</p> <p>Range: 40 to 90°F (4.5 to 32.0°C)</p>
Min. cooling Default value: 54°F (12°C) AV59	Cooling Setpoint Limit <p>Maximum Occupied, Unoccupied, Standby and Override Cooling setpoints limits.</p> <p>Range: 54 to 100°F (12.0 to 37.5°C)</p>
Dehum. SP Default value: 50 %RH AV71	Dehumidification Setpoint <p>Used only if dehumidification sequence is enabled.</p> <p>Range: 30 to 95 %RH</p>

Display Screens

DISPLAY 1/3

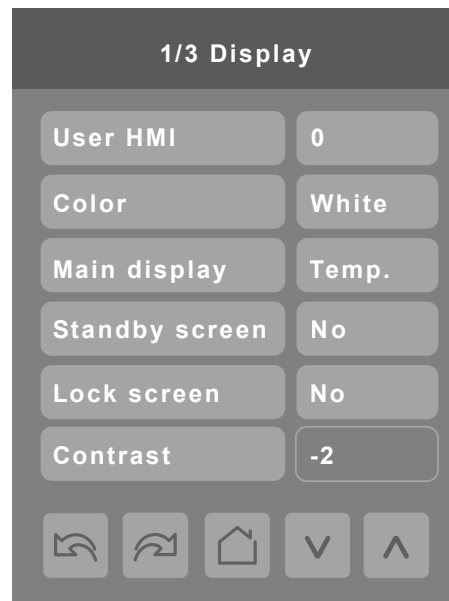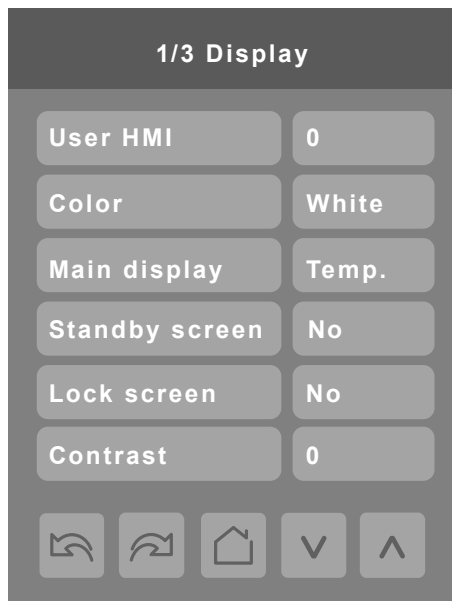


IPS Screen

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
User HMI Default value: 0 AV2	User HMI Sets layout of icons on the home screen for various applications. For more information, refer to "Customized User HMI Display" on page 10. Range: 0 to 12
Color Default value: White MV2	HMI Color Change background color of the display screen. Choices: 1=White, 2=Green, 3=Blue, 4=Grey, 5=Dark grey, 6=Pink, 7=Purple, 8=Red, 9=Orange, 10=Black
Main display Default value: Temp. MV3	Main Display Shows temperature or setpoint on main display Choices: 1=Temp., 2=Setpoint
Standby screen Default value: No MV32	Use Standby Screen When the device is left unattended for 150 seconds, the standby image will appear. A custom image can be uploaded using the Uploader Tool. No: No Stand by image (Screen dims when no motion is detected) Yes: Stand by Image is displayed after 150 seconds Occ. Only: Standby image displays after 150 seconds. Screen turns off after 30 minutes only in occupied or override mode. Screen sav: Standby image displays after 150 seconds. Screen turns off after 30 minutes only in unoccupied or standby mode Choices: 1=No, 2=Yes, 3=Occ. Only, 4=Screen sav

Configuration Parameters Default Value	Significance and Adjustments
Lock screen Default value: No MV148	Lock Screen Prevents the user from accessing the Room Controller until a password is entered. Screen lockout starts 150 seconds after no activity on the Room Controller (when standby image appears). This functionality is enabled only if the below conditions are met: <ul style="list-style-type: none"> • Standby image loaded • Standby Screen = "Yes" or "Screen Saver" • User Password = not 0 Choices: 1=No, 2=Yes
Contrast Default value: 0	Contrast Control screen contrast and brightness. Range: -5 to 5
Contrast Read Only	IPS Screen Contrast Starting with firmware revision 2.6, some RCs are shipped with an In-Plane Switching (IPS) screen that does not need contrast adjustment. Thus, the contrast parameter is read only with a default value of -2. To identify an RC with an IPS screen, "IPS" will appear on the RC's box label. Note: RCs with an IPS screen cannot be downgraded to a firmware revision older than 2.6. Display Default: -2

DISPLAY 2/3

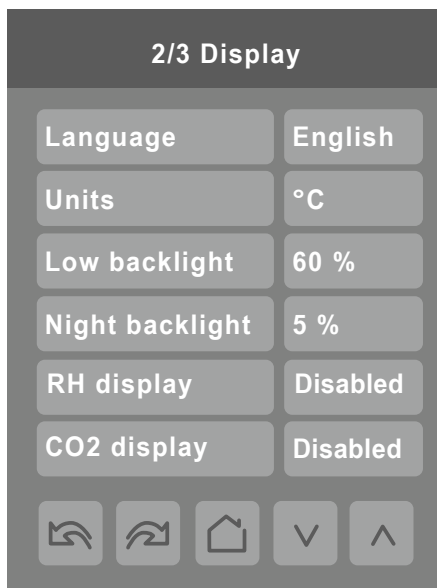


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Language Default value: English MV4	Display Language Select language for main display. Choices: 1=English, 2=French, 3=Spanish, 4=Chinese, 5=Russian, 6=Arabic, 7=Bulgarian, 8=Czech, 9=Danish, 10=Dutch, 11=Finnish, 12=German, 13=Hungarian, 14=Indones., 15=Italian, 16=Norwegian, 17=Polish, 18=Portug., 19=Slovak, 20=Swedish, 21=Turkish, 22=Japanese, 23=Hebrew
Units Default value: °C MV51	Temperature Scale Changes the local display units. Refer to Network Units to change the network units broadcasted over the network. Choices: 1=°C for SI, 2=°F for Imperial
Low backlight Default value: 60% AV3	Low Backlight Sets display backlight intensity. This feature is activated (screen dims) 150 seconds after no activity on the Room Controller. Adjustable: 0 to 100%.
Night backlight Default value: 5% AV4	Night Backlight Sets backlight display intensity. Parameter only available for models with motion/light detectors. The screen backlight progressively decreases down to this setting when room is dark. This feature is used mostly in hospitality applications when a darker non obtrusive lighting level is desired when room is dark. Adjustable: 0 to 100%.

Configuration Parameters Default Value	Significance and Adjustments
RH display Default value: Disabled MV70	Relative Humidity Display Shows humidity level in room in %RH. Disabled: Do not display %RH Enabled: Display %RH Choices: 1= Disabled, 2= Enabled
CO2 display Default value: Enabled MV146	CO2 Display Shows carbon dioxide level in room in ppm. Disabled: Do not display CO2 level Enabled: Display CO2 level Note: The CO2 value will only be displayed on the Room Controller home screen if an optional CO2 detection sensor module is installed or a Zigbee wireless CO2 device is paired, and if there is a valid value. Choices: 1= Disabled, 2= Enabled

DISPLAY 3/3

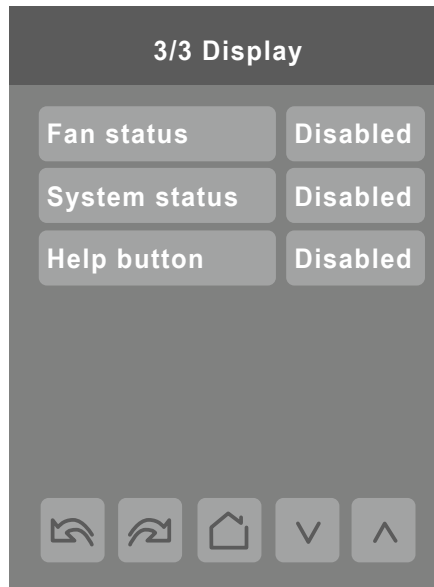


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Fan status Default value: Enabled MV180	Display the Fan Status icon Hides the fan status in the upper right corner of the User HMI display. Applicable to all User HMI configurations where the fan status is shown. Refer to "User HMI Show/Hide Options" on page 13. Choices: 1=Disabled, 2=Enabled
System status Default value: Enabled MV181	Display the System Status icon Hides the system status in the upper right corner of the User HMI display. Applicable to all User HMI configurations where the system status is shown. Refer to "User HMI Show/Hide Options" on page 13. Choices: 1=Disabled, 2=Enabled
Help button Default value: Enabled MV182	Display the Help button Hides the help button in the lower right corner of the User HMI display. Applicable to all User HMI configurations where the help button is shown. Refer to "User HMI Show/Hide Options" on page 13. Choices: 1=Disabled, 2=Enabled

Service View Screens

The service view screens show the current status of certain points locally on the Room Controller. These points can also be viewed through the network. Service view values are **Read Only** values but allow a service contractor to visualize the status of key functionality to correctly diagnose operational system issues.

SERVICE VIEW 1/7

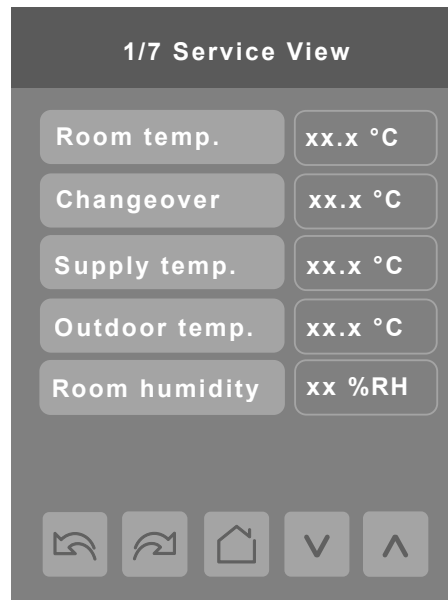

PARAMETER DETAILS

Configuration parameters Default Value	Significance and Adjustments
Room temp. Read Only AV100	Room Temperature Shows the current room temperature from the configured temperature source.
Changeover Read Only AV104	Changeover Temperature Shows the temperature of the changeover sensor.
Supply temp. Read Only AV102	Supply Temperature Shows supply air temperature as measured by the sensor.
Outdoor temp. Read Only AV101	Outdoor Temperature Shows the outdoor temperature on the main screen.
Room humidity Read Only AV103	Room Humidity Shows the current room humidity percentage from the configured humidity source. Refer to RH sensor parameter in "Configuration 8/9" on page 46 to select RH source.

SERVICE VIEW 2/7



PARAMETER DETAILS

Configuration parameters Default Value	Significance and Adjustments
Effective occ. Read Only MSI33	Effective Occupancy Shows as occupied, unoccupied, standby or override. Display Readings: 1=Occupied, 2=Unoccupied, 3=Override, 4=Standby
PI cool demand Read Only AO22	PI Cooling Demand Proportional Integral Cooling Demand Display Readings: 0-100%
PI heat demand Read Only AO21	PI Heating Demand Proportional Integral Heating Demand Display Readings: 0-100%
Cool dem. limit Read Only AV89	Cooling Demand Limit Display Readings: 0-100%
Heat dem. limit Read Only AV88	Heating Demand Limit Display Readings: 0-100%

SERVICE VIEW 3/7



* Only for models with onboard Zigbee or optional Zigbee add-on module.

PARAMETER DETAILS

Configuration parameters Default Value	Significance and Adjustments
UI16 binary Read Only BI29	UI16 Binary Input BI1 Configuration. Shows status of input. Display Readings: 1=Activated, 2=Not activ.
UI17 binary Read Only BI30	UI17 Binary Input BI2 Configuration. Shows status of input. Display Readings: 1=Activated, 2=Not activ.
RUI1 binary Read Only BI91	RUI1 Binary Input Remote Universal Input Configuration No. 1. Shows status of input. Display Readings: 1=Activated, 2=Not activ.
RBI2 binary Read Only BI92	RBI2 Binary Input Remote Binary Input Configuration No. 2. Shows status of input. Display Readings: 1=Activated, 2=Not activ.
Zigb. PIR inst. Read Only BV200	Zigbee PIR Sensor Installed Shows if Zigbee Passive Infrared Sensor wireless motion sensor is paired to a Room Controller or not. NOTE: This parameter is for Zigbee wireless motion sensors only. Display Readings: 1=Off, 2=On
Zigb. sens. mot. Read Only BV201	Zigbee Sensor Motion Shows if motion is detected by any of the Zigbee wireless motion sensors. NOTE: This parameter is for Zigbee wireless motion sensors only. Display Readings: 1=No Motion, 2=Motion

SERVICE VIEW 4/7



PARAMETER DETAILS

Configuration parameters Default Value	Significance and Adjustments
Window alarm Read Only BV35	Window Alarm Shows On if there is a Window alarm and shows Off if there is no Window alarm. This feature is for both wired and wireless sensors. Display Readings: 1=Off, 2=On
Service alarm Read Only BV37	Service Alarm Shows On if there is a Service alarm and shows Off if there is no Service alarm. Display Readings: 1=Off, 2=On
Filter alarm Read Only BV36	Filter Alarm Shows On if there is a Filter alarm and shows Off if there is no Filter alarm. Display Readings: 1=Off, 2=On
Recovery Read Only BV40	Smart Recovery Status Shows if Smart Recovery is active or not. Display Readings: 1=Off, 2=On
Local motion Read Only BV32	PIR Local Motion Shows if Motion alarm is active or not Display Readings: 1=No Motion, 2=Motion
Deh. status Read Only BV38	Dehumidification Status Shows if dehumidification is active or not Display Readings: 1=Off, 2=On

SERVICE VIEW 5/7

5/7 Service View


CO2 eff. source	None
CO2 err. code	0x0000
CO2 level	0 PPM
CO2 FW rev.	
CO2 S/N	

↶
↷
🏠
▼
▲

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
CO2 eff. source Read Only MSI324	CO2 Effective Source Shows the configured source of the indoor CO2. Display Readings: 1=None, 2=Internal, 3=Error, 4=Wired, 5 to 24=WL 1 to WL 20
CO2 err. code Default value: 0 Read Only	CO2 Error Code Error code 0x0001 shows if there is an error with the sensor.
CO2 level Read Only AV106	CO2 Level Shows CO2 level in PPM. Display Readings: 0 to 5000 PPM
CO2 FW rev. Read Only	CO2 Firmware Revision Shows the Firmware version of the installed CO2 sensor module.
CO2 S/N Read Only	CO2 Serial Number Shows the serial number of the installed CO2 sensor module.

SERVICE VIEW 6/7

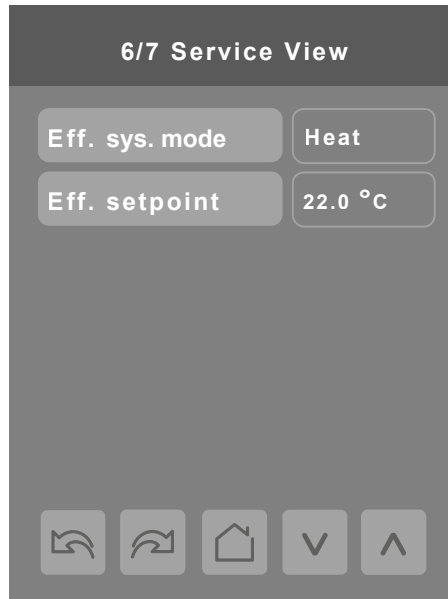

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Eff. sys. mode Read Only MSI314	Effective System Mode Shows the current operating mode of the system. For example, when the system is in Auto mode, this parameter shows whether it is currently heating or cooling. Display Readings: 1=Cool, 2=Heat
Eff. setpoint Read Only AI329	Effective Setpoint Shows temperature setpoint value currently in use by the system.

SERVICE VIEW 7/7



The Device Name (BACnet name) consists of the model number followed by the COM address (MAC address). The BACnet name can be changed via the BACnet front end and the new name appears on the above screen.


For example, when a VTR8350A5500BP Room Controller with a MAC address of 41 is connected to a network, its default Device Name is VTR8350A5500BP-41 and its default BACnet Device ID is 83041.

Firmware Revision shows the Firmware version currently installed on the Room Controller. Upgrading to a newer Firmware version deletes the previous Firmware version, however it is possible to set the Room Controller to an earlier Firmware version with the Uploader Tool.

Zigbee Revision shows the Firmware version of an onboard Zigbee or optional Zigbee add-on module.

Test Outputs Screens

TEST OUTPUTS

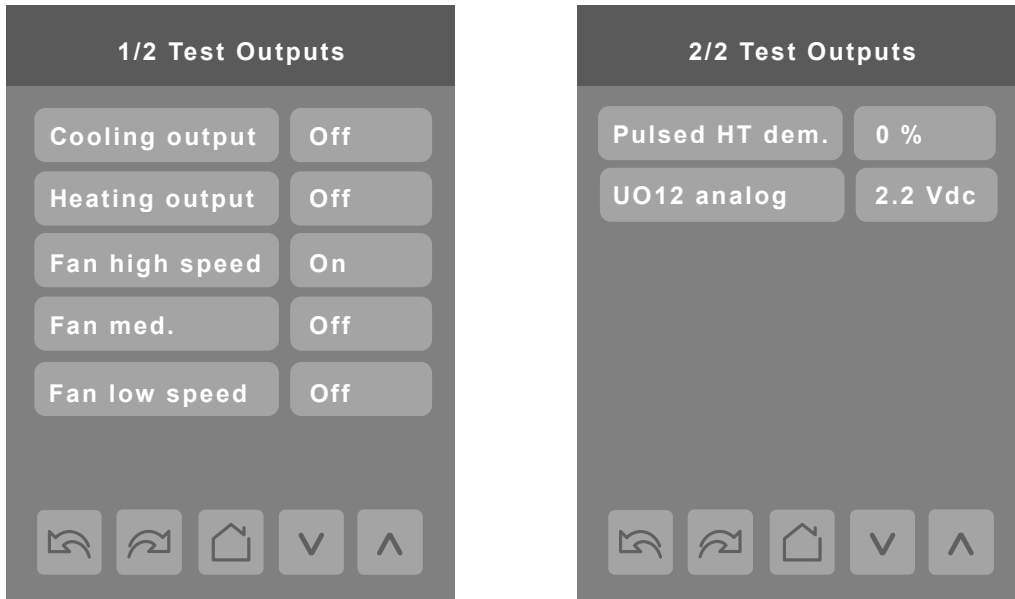

NOTICE

SAFE OPERATION ENVIRONMENT

Use high caution when manually enabling outputs so as to not cause damage to equipment. It is the responsibility of the Installer or Service Contractor to maintain a safe operation environment during usage.

Failure to follow these instructions can result in equipment damage.

Note 1: Cooling output can also be used for heating on two pipes systems.

Note 2: The test output screen allows manual override of specified outputs. When any BACnet® network priority array includes a value, the status background shows in red. After any output state is overridden, the command is cancelled after 1 min of screen inactivity (auto exit to main screen) or when page is exited. Refer to the BACnet® integration guide for more details.

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Cooling output Default value: Off BO93	Cooling Output Choices: 1=Off, 2=On
Heating output Default value: Off BO94	Heating Output Choices: 1=Off, 2=On
Fan high speed Default value: Off BO95	High Speed Fan Output Choices: 1=Off, 2=On
Fan med. Default value: Off BO96	Medium Speed Fan Output Choices: 1=Off, 2=On
Fan low speed Default value: Off BO97	Low Speed Fan Output Choices: 1=Off, 2=On
Pulsed HT dem. Default value: 0 % AO90	Pulsed Heating Demand Choices: 0 to 100 %
UO12 analog Default value: 0.0 Vdc AO124	UO12 Analog Output Choices: 0.0 Vdc to 10.0 Vdc, using 0.1 Vdc increments

Language Selection Screens

LANGUAGE SELECTION



Only English, French, Spanish, Chinese, and Russian are enabled by default and are accessible to users cycling through languages on the display settings menu screen. To change the language selection settings, tap a language on the screen and then use the arrow buttons to disable or enable it.

NOTE: English is always enabled.


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
French Default value: Enabled MV101	French Choices: 1=Disabled, 2=Enabled
Spanish Default value: Enabled MV102	Spanish Choices: 1=Disabled, 2=Enabled

Configuration Parameters Default Value	Significance and Adjustments
Chinese Default value: Enabled MV103	Chinese Choices: 1=Disabled, 2=Enabled
Russian Default value: Enabled MV104	Russian Choices: 1=Disabled, 2=Enabled
Arabic Default value: Disabled MV120	Arabic Choices: 1=Disabled, 2=Enabled
Czech Default value: Disabled MV122	Czech Choices: 1=Disabled, 2=Enabled
Danish Default value: Disabled MV123	Danish Choices: 1=Disabled, 2=Enabled
Dutch Default value: Disabled MV124	Dutch Choices: 1=Disabled, 2=Enabled
Finnish Default value: Disabled MV125	Finnish Choices: 1=Disabled, 2=Enabled
German Default value: Disabled MV126	German Choices: 1=Disabled, 2=Enabled
Hebrew Default value: Disabled MV156	Hebrew Choices: 1=Disabled, 2=Enabled
Hungarian Default value: Disabled MV127	Hungarian Choices: 1=Disabled, 2=Enabled
Indonesian Default value: Disabled MV128	Indonesian Choices: 1=Disabled, 2=Enabled
Italian Default value: Disabled MV129	Italian Choices: 1=Disabled, 2=Enabled
Japanese Default value: Disabled MV155	Japanese Choices: 1=Disabled, 2=Enabled
Norwegian Default value: Disabled MV130	Norwegian Choices: 1=Disabled, 2=Enabled
Polish Default value: Disabled MV131	Polish Choices: 1=Disabled, 2=Enabled
Portuguese Default value: Disabled MV132	Portuguese Choices: 1=Disabled, 2=Enabled
Slovak Default value: Disabled MV133	Slovak Choices: 1=Disabled, 2=Enabled
Swedish Default value: Disabled MV134	Swedish Choices: 1=Disabled, 2=Enabled
Turkish Default value: Disabled MV135	Turkish Choices: 1=Disabled, 2=Enabled

Clock - Schedule Screens


SCHEDULE MENU

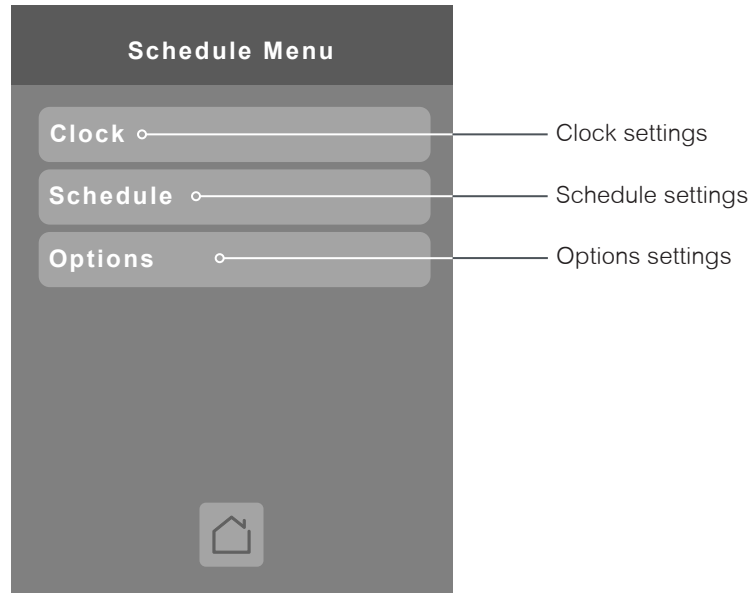

Note: The Clock- Schedule Menu screen is directly accessible from the main setup screen.

CLOCK

The Clock settings screen allows the device’s internal time settings to be changed (current time, day, month, year and weekday options), as well as to choose between a 12 hour AM / PM display or 24 hour display.

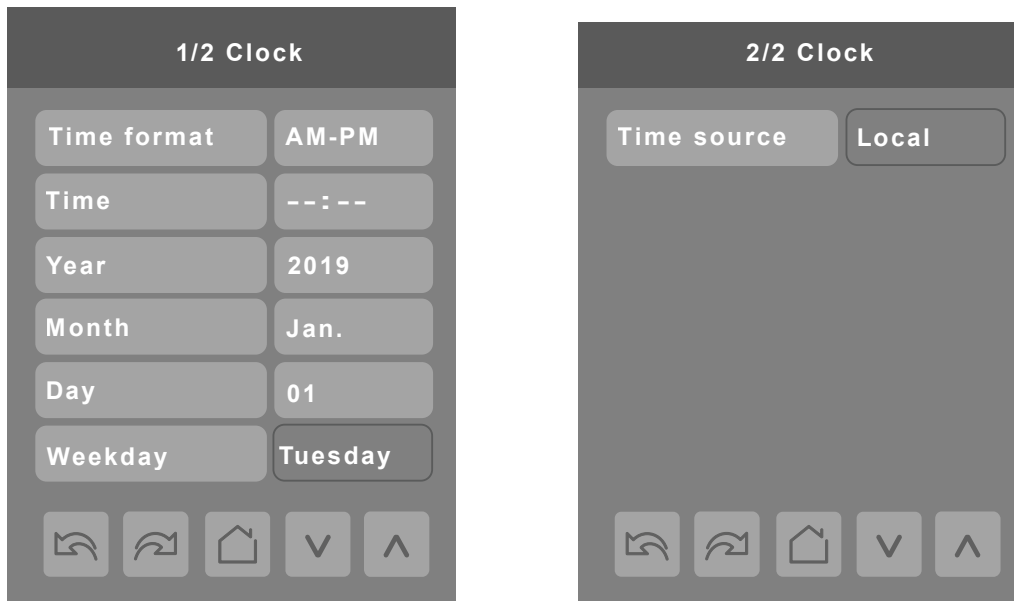


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Time format Default value: AM-PM MV5	Time Format Current time display format. Choice between 12 hour (AM - PM) time format or 24 hour time format. Note: Changing the value of this parameter automatically changes the format of the displayed value of the time parameter. Choices: 1=AM-PM, 2=24 Hours
Time Default value: current time at power up	Time Standard time display, 12 hour AM-PM or 24 hour format determined by the Time Format parameter value.
Year Default value: 2019	Year Current year Range: 2000 - 2100
Month Default value: Jan.	Month Current month Range: Jan. - Dec.
Day Default value: 1	Date Current date Range: 1 - 31
Weekday Default value: Monday Read Only	Current Day Automatically set based on data received from Year/Month parameters. Range: Monday - Sunday
Time source Default value: Local Read Only MSI325	Time Source Shows the source that most recently set the time on the Room Controller. Display Readings: 1=None, 2=Local, 3=BACnet, 4=NTP, 5=Cloud

SCHEDULE

There are seven different schedule setting screens, one for each day of the week. Each day can have different scheduled events where the Room Controller is set to Occupied status or back to Unoccupied status. The Room Controller can use the appropriate setpoints (back and forth) up to three times per day.

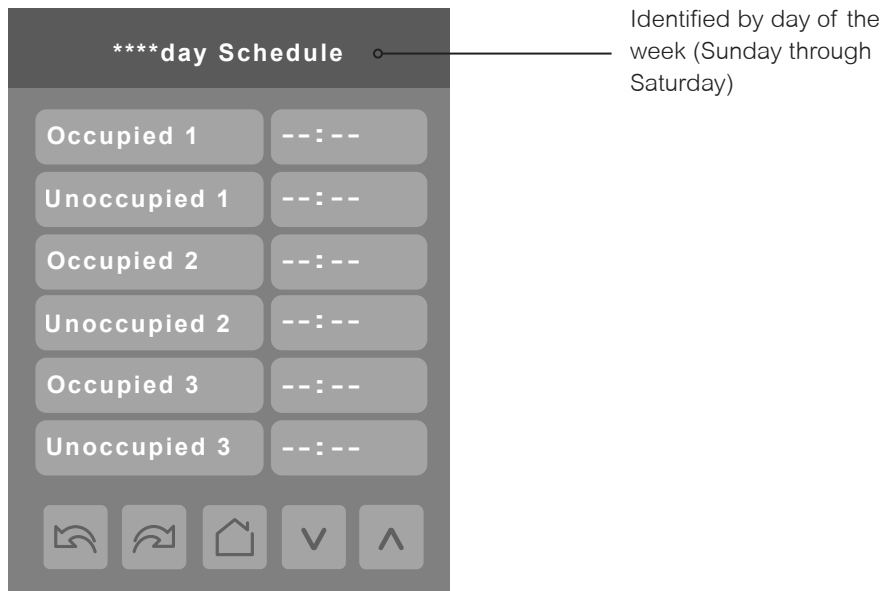


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Occupied 1 - 3 Default value: None	Occupied 1 - 3 Defines a time when the Room Controller is automatically set to use the Occupied setpoint. Note: There are 3 separate Occupied parameter entries Range: 00:00 - 23:59
Unoccupied 1 - 3 Default value: None	Unoccupied 1 - 3 Defines a time when the Room Controller is automatically set to use the Unoccupied setpoint. Note: There are 3 separate Occupied parameter entries Range: 00:00 - 23:59

OPTIONS

The options settings allow the Room Controller to function in Occupied or Unoccupied mode following a defined Schedule type set by the user.

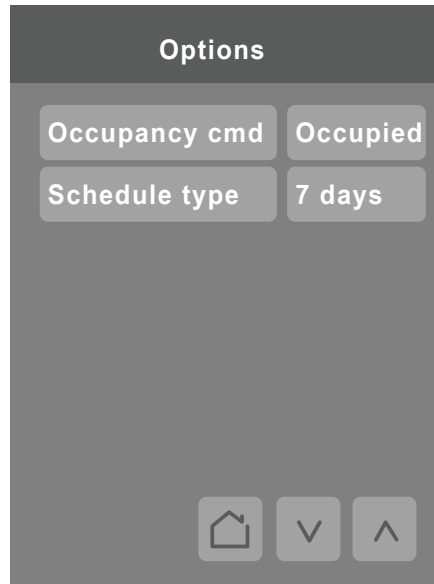


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Occupancy cmd Default value: Occupied MV10	Occupancy Command Loc occ: occupancy is determined by local sequences (either PIR or schedule, as configured under Occ. source). Occupied: force occupied mode. Unocc: force unoccupied mode. Choices: 1=Loc occ, 2=Occupied, 3=Unocc.
Schedule type Default value: 7 days MV136	Schedule Type 7 days: Independent scheduling identified by day of the week (Sunday - Saturday) 5+1+1 days: Weekdays scheduling and Independent Weekend scheduling identified as Weekdays, Saturday and Sunday 5+2 days: Weekdays scheduling and Weekend scheduling identified as Weekdays and Weekend Choices: 1=7 days, 2=5+2 days, 3=5+1+1 day

Automatic Demand Response (ADR) Screen

Automatic Demand Response (ADR) feature is used to reduce energy load when electric grid contingencies threaten supply-demand balance.

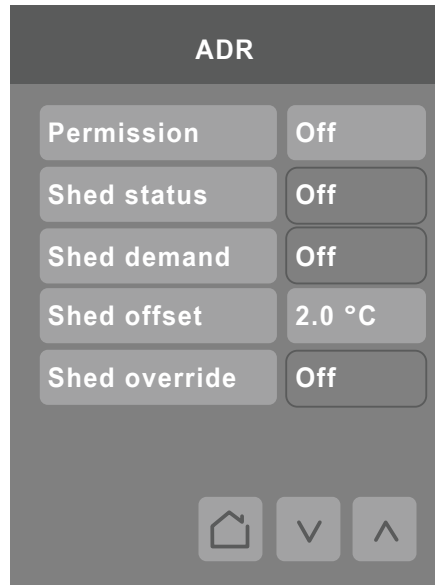

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Permission Default value: Off MV152	ADR Permission Used to permit the ADR to be applicable or not to change the Room Controller setpoints setting or not. Off: The Load Shedding Demand will not be permitted. On: The Load Shedding Demand will be permitted. Choices: 1=Off, 2=On
Shed status Default value: Off Read Only BV49	Load Shedding Status Displays the status of the Load Shedding Demand, whether it is active (On) or not (Off). The Load Shedding status is On when the Permission is On, Shed demand is On, and the Shed Override is Off. Off: Load Shedding Demand is not activated. On: Load Shedding Demand is activated. Display Readings: 1=Off, 2=On
Shed demand Default value: Off Read Only BV48	Load Shedding Demand Sets the request to initiate Load Shedding. This demand can only be set through BACnet by the local Utility company. Off: No Load Shedding Demand is received or the Shedding demand is disabled. On: Received the Load Shedding Demand or received the signal to activate Load shedding. Display Readings: 1=Off, 2=On

Configuration Parameters Default Value	Significance and Adjustments
Shed offset Default value: 4°F (2°C) AV211	Load Shedding Offset Used to change the effective setpoints in occupied, standby and unoccupied modes. For example, when “Shed status” is On and Room Controller is in occupied mode: The cooling setpoint is calculated as follows: Occupied cooling setpoint = occupied cooling setpoint + Load shedding offset. The heating setpoint is calculated as follows: Occupied heating setpoint = occupied heating setpoint - Load shedding offset. Choices: 4°F to 10°F (2°C to 5.5°C)
Shed override Default value: Off Read Only BV50	Load Shedding Override Displays whether the user disabled the ADR request by the utility company. When the demand shed is applied, the user can override the ADR settings from its original setpoints settings. Off: Allows shed load demand request from utility company (setpoint will change according to shed offset) On: Rejects or cancels shed load demand request from utility company (setpoints remain the same). Display Readings: 1=Off, 2=On

Wireless Screens


WIRELESS MENU

The Wireless screen shows only in models with onboard Zigbee or optional Zigbee add-on module.



ECOSYSTEM SETTINGS

The Ecosystem Settings screens show the network status, the number of paired devices as well as information for each paired device. A maximum of 20 Zigbee wireless devices can be paired to each Room Controller. Tap forward arrow to obtain information on each paired Zigbee device.

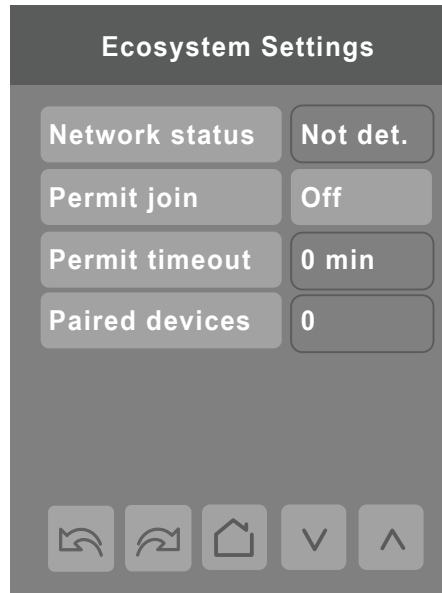

PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
Network status Default value: Not det. Read Only MSI2	Zigbee Network Status Shows current status of Zigbee network. Not det.: Zigbee module not detected Pwr on: Zigbee module detected but not configured No NWK: Zigbee configured but no network joined Joined: Zigbee network joined Online: Communicating (Exchanging data) Display Readings: 1=Not det., 2=Pwr on, 3=No NWK, 4=Joined, 5=Online
Permit join Default value: Off	Permit Join Setting to 'On' allows the Room Controller to pair with a Zigbee device. Value must be set to 'On' to pair with initial device and then set to 'Off' if user wants to prevent additional Zigbee devices from joining the network. Changing this value to "Off" on the Coordinator prevents any new Zigbee devices from joining the network. Permit join can be On/Off when the Room Controller is a coordinator, however the parameter is read only when the Room Controller is a router. Permit join stays On for 3 hours. On: Allows Room Controller to pair with Zigbee wireless device Off: Prevents Room Controller from pairing with Zigbee wireless device, or prevent any additional Zigbee devices from joining network. Choices: On or Off

Configuration Parameters Default Value	Significance and Adjustments
Permit timeout Default value: 0 Read Only	Permit Join Timeout Allows Zigbee devices to join the Coordinator Room Controller for 180 minutes from the moment it is set to ON. Once the timer elapses, no devices will be able to join the network. NOTE: Permit Join parameter must be set to 'On' to enable this feature. Display Time: 0 or 180 minutes
Paired devices Default value: 0 Read Only AI330	Paired Zigbee Devices Shows the number of Zigbee wireless devices currently paired with the Room Controller. A maximum of 20 Zigbee wireless devices can be paired with each Room Controller. Display Readings: 0 to 20 devices

DEVICE 1-20

This screen is a subset of the Ecosystems screen and shows data for each paired Zigbee device. The Status, Temperature, Humidity and CO2 values will only be visible if they are supported by the device.

NOTE: Device X pages will only show up once devices have been paired.

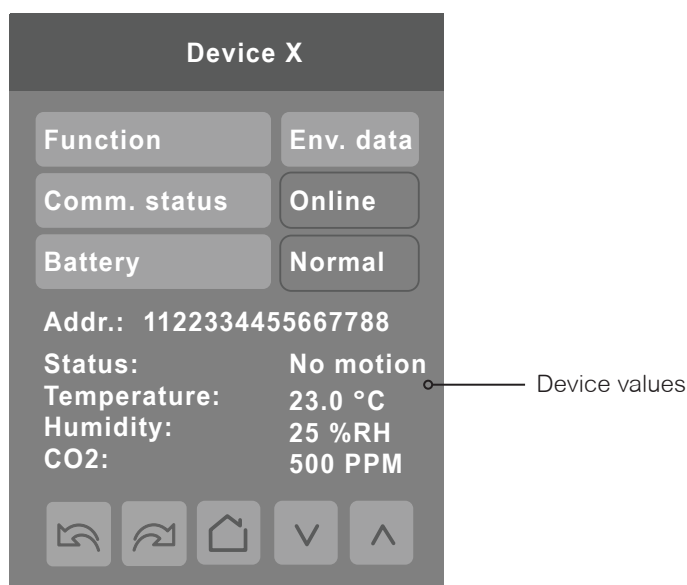

PARAMETER DETAILS


Configuration Parameters Default Value	Significance and Adjustments
Function Default value: None MV210-400	Wireless Device X - Function Shows status of installed Zigbee wireless device. None: No status reported to Room Controller Window: Window sensor installed Door: Door sensor installed Motion: Device set to detect motion Env. data: Temperature, Humidity, CO2 sensor installed Remove: Removes device from Device list Water: Water Leak sensor installed Refrig.: Refrigerator temperature sensor installed Freezer: Freezer temperature sensor installed Choices: 1=None, 2=Window, 3=Door, 4=Motion, 5=Env. data, 6=Remove, 7=Water, 8=Refrig., 9=Freezer

Configuration Parameters Default Value	Significance and Adjustments
Comm. status Default value: Not paired Read Only MSI212-402	Wireless Device X - Communication Status Shows if device is communicating with Room Controller Not paired: Device not paired Online: Device paired and online Invalid: Device was paired and Room controller detected a communication error (selected function does not match paired sensor functionality). Offline: Device paired but offline Display Readings: 1=Not paired, 2=Online, 3=Invalid, 4=Offline
Battery Default value: None Read Only MSI211-401	Wireless Device X - Battery Shows current status of battery in wireless device. Display Readings: 1=None, 2=Normal, 3=Low
Addr. Read Only CSV11-30	Wireless Device X - Address Shows unique IEEE (MAC) address of ZigBee wireless device
Status Default value: None Read Only Door status: BV1 Window status: BV3 Water status: BV46 Sensor type: MSI180-199 Status: MSI210-400	Wireless Device X - Sensor Type Wireless Device X - Status Shows the ZigBee wireless device status. Device status and values will be different depending on the type of device: <ul style="list-style-type: none"> • Door Contact Status: 1=Closed, 2=Opened • Window Contact Status: 1=Closed, 2=Opened • Motion Sensor: No Motion, Motion • Water Leak Sensor Status: 1=Normal, 2=Leak Display Readings: Sensor Type: 1=None, 2=Unknown, 3=Motion, 4=Contact, 5=Water, 6=Temp., 7=Temp./RH, 8=CO2 Status: 1=None, 2=Closed, 3=Opened, 4=No motion, 5=Motion, 6=Normal, 7=Leak
Temperature Read Only AI315-324, 355-364	Wireless Device X - Temperature Range: -40 to 185 °F (-40 to 85 °C)
Humidity Read Only AI365-384	Wireless Device X - Humidity Percent relative humidity Range: 0 to 100 %
CO2 Read Only AI385-404	Wireless Device X - CO2 Parts per million Range: 0 to 5000 PPM

WIRELESS IO SETTINGS

The Wireless IO settings screen allows the discovery of and pairing with a SEC-TE2 Smart Terminal Controller.

Note: Onboard Zigbee or optional Zigbee add-on module required

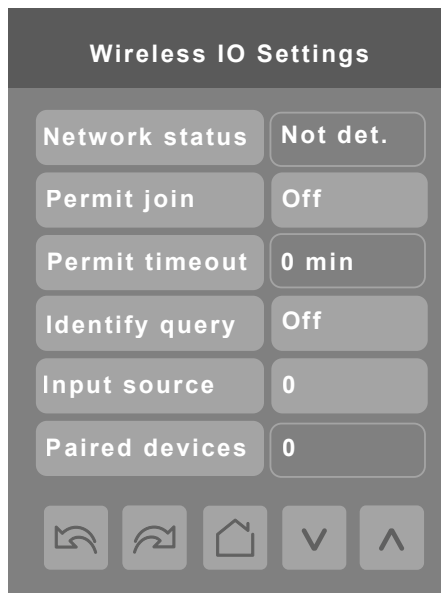


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Network status Read Only	Zigbee Network Status Shows the current status of the Zigbee network. Not det: Zigbee not detected Pwr on: Zigbee detected but not configured No NWK: Zigbee configured but no network joined Joined: Zigbee network joined Online: Communicating (Exchanging data) Display Readings: Not det., Pwr on, No NWK, Joined and Online
Permit join Default value: Off	Permit join On: Activates search mode Off: Changing value to "Off" locks out any new Zigbee devices from joining the network through this Room Controller. Choices: On or Off
Permit timeout Default value: 0 Read Only	Permit Join Timeout Allows devices to join the Coordinator Room Controller for 180 minutes from the moment it is set to ON. The Room Controller stops searching when the 180 minutes expires. NOTE: Permit Join parameter must be set to 'On' to enable this feature. Display Time: 0 or 180 minutes

Configuration Parameters Default Value	Significance and Adjustments
Identify query Default value: Off	Identify query On: Activates search mode for 10 seconds Off: Continues to search even if set to Off Choices: On or Off
Input source Default value: 0 AV207	Input Source Select an input source between 0 and 3. Range: 0 - 3
Paired devices Default value: 0 Read Only AI313	Paired Wireless IO Shows the number of Wireless IO Zigbee devices currently paired with the Room Controller. A maximum of 3 Wireless IO Zigbee devices can be paired with each Room Controller (total of 3 paired devices per Room Controller). Display Readings: 0 to 3 devices

WIRELESS IO X

The Wireless IO X screen shows data for each paired Zigbee device. Up to 3 Wireless IO Device screens can show.

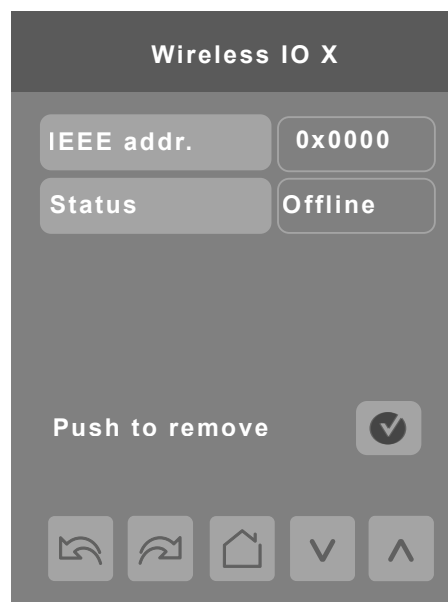


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
IEEE addr. Read Only AI310-312	Wireless IO X IEEE Address Shows unique IEEE (MAC) address of Wireless IO Zigbee device.
Status Read Only MSI303-305	Wireless IO X Status Read Only value shows if the device is Offline, Online or Busy. Display Readings: 1=Offline, 2=Online, 3=Busy
Remove Read Only MSI306-308	Wireless IO X Remove Read Only value shows if the device is Online or Offline. Display Readings: 1=No, 2=Yes

DEVICE GROUPS

The Device Groups screen shows if a particular Zigbee wireless sensor is paired with the Room Controller.

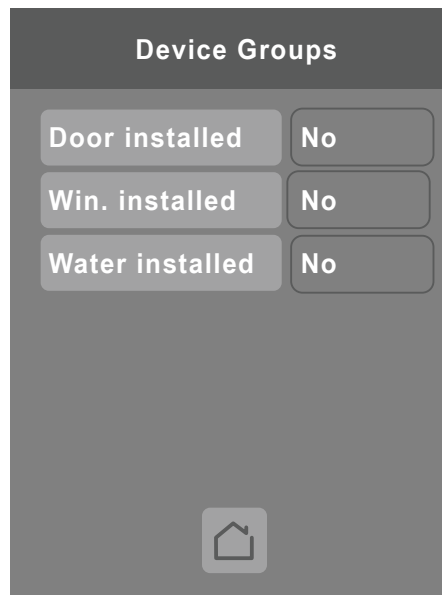


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Door installed Default value: No Read Only BV2	Door Contact Installed Shows if Door sensor is installed. Display Readings: 1=No, 2=Yes
Win. installed Default value: No Read Only BV4	Window Contact Installed Shows if Window sensor is installed. Display Readings: 1=No, 2=Yes
Water installed Default value: No Read Only BV45	Water Leak Sensor Installed Shows if Water Leak sensor is installed. Display Readings: 1=No, 2=Yes

TEMPERATURE ALARMS CONFIGURATION

This Temperature Alarms Configuration screens show the values that trigger an alarm only for Zigbee wireless sensors with temperature measurement.

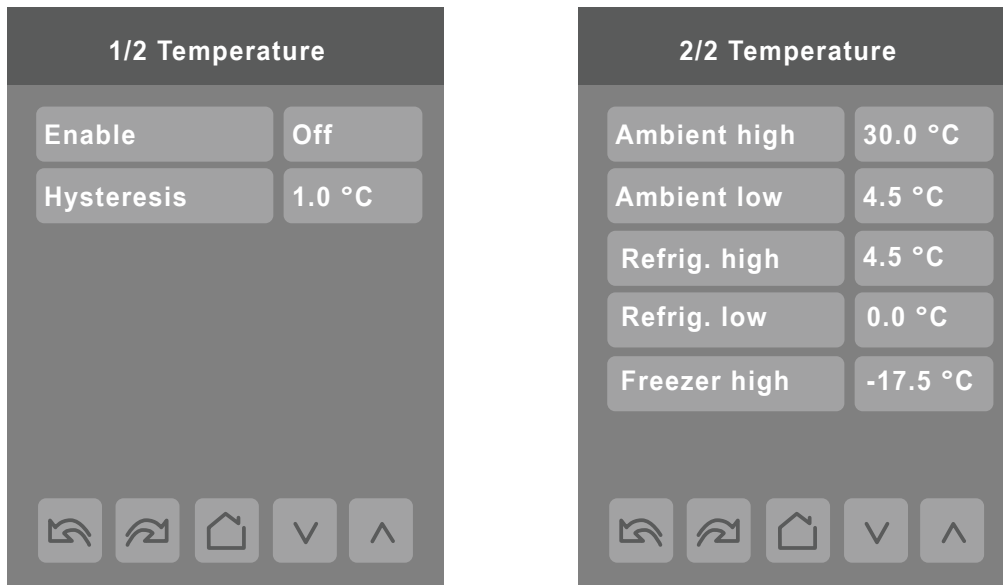


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Enable Default value: Off MV151	Temperature Alarm Enabled Enables wireless device to alert Room Controller if temperature value reaches defined value in a particular paired device. Choices: 1=Off, 2=On
Hysteresis Default value: 2.0 °F (1.0 °C) AV210	Temperature Alarm Hysteresis Choices: 0 to 10 °F (0 to 5.5 °C)
Ambient high Default value: 86.0 °F (30.0 °C) AV275	Ambient High Temperature Threshold Range: 32 to 122 °F (0 to 50 °C)
Ambient low Default value: 40.0 °F (4.5 °C) AV209	Ambient Low Temperature Threshold Range: 32 to 50 °F (0 to 10 °C)
Refrig. high Default value: 40.0 °F (4.5 °C) AV276	Refrigeration High Temperature Threshold (only present if a refrigeration sensor is installed) Range: 32 to 60 °F (0 to 16 °C)
Refrig. low Default value: 32.0 °F (0.0 °C) AV277	Refrigeration Low Temperature Threshold (only present if a refrigeration sensor is installed) Range: 32 to 50 °F (0 to 10 °C)
Freezer high Default value: 0.0 °F (-17.5 °C) AV278	Freezer High Temperature Threshold (only present if a freezer sensor is installed) Range: -40 to 32 °F (-40 to 0 °C)

ALARMS

The Alarms screen shows data for paired Zigbee wireless devices.

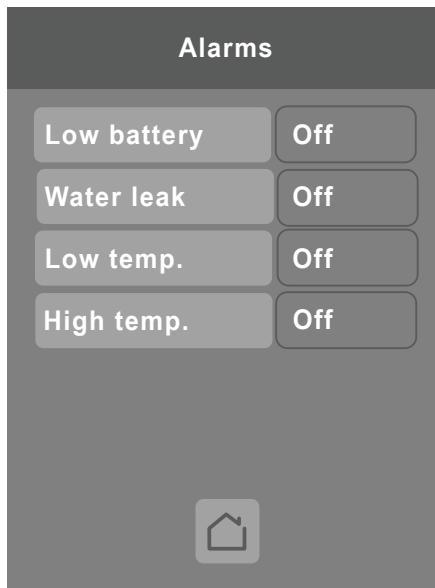


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Low battery Default value: Off Read Only BV5	Low Battery Alarm Shows if any wireless paired device has a low battery status (On) or no paired device has low battery (Off). Display Readings: 1=Off, 2=On
Water leak Default value: Off Read Only BV44	Water Leak Shows if any water sensor paired device has detected a water leak (On) or no leak detected in any of the water sensor paired devices (Off). Display Readings: 1=Off, 2=On
Low temp. Default value: Off Read Only BV47	Low Temperature Shows if any temperature sensor paired device has detected a low temperature (On) or no low temperature detected in any of the temperature sensor paired devices (Off). Display Readings: 1=Off, 2=On
High temp. Default value: Off Read Only BV53	High Temperature Shows if any temperature sensor paired device has detected a high temperature (On) or no high temperature detected in any of the temperature sensor paired devices (Off). Display Readings: 1=Off, 2=On

Lua Screens

The Lua settings screens show information about any custom Lua script uploaded to the Room Controller. Lua scripts are not programmable on the Room Controllers. Lua scripts can be uploaded to the Room Controller via the Uploader Tool or via BACnet.

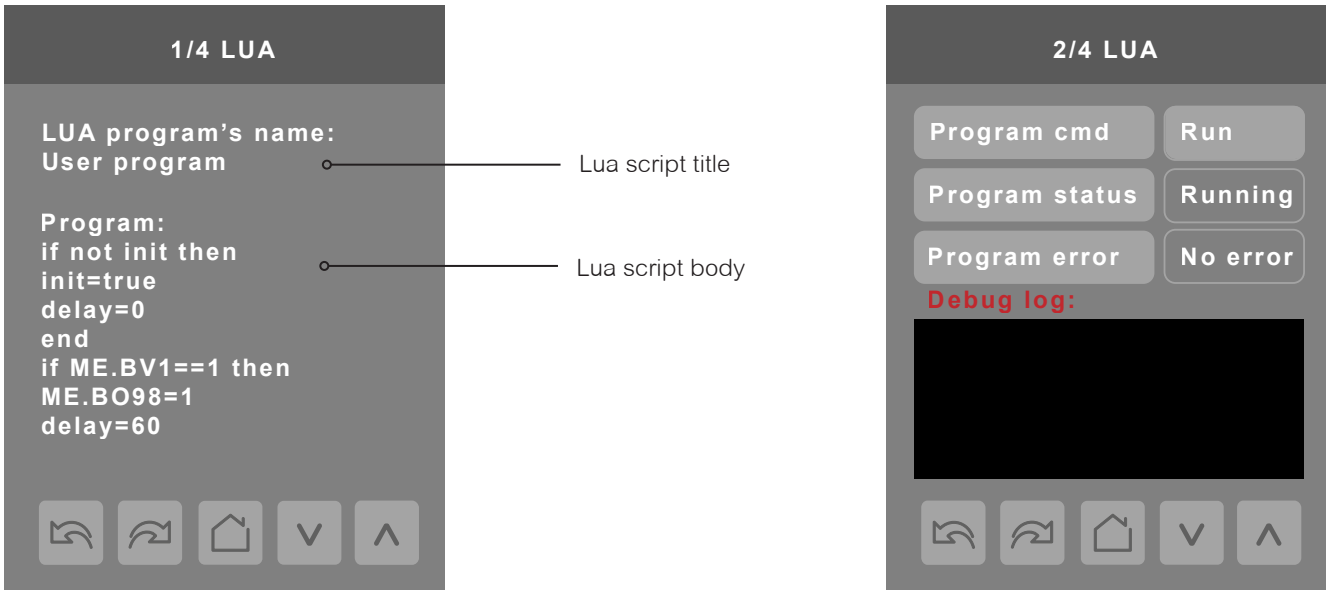


PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Program cmd Default value: Run	Program Command Run: Lua script activated and runs continuously until deactivated Stop: Lua script deactivated Choices: Stop or Run
Program status Default value: Idle Read Only	Program Status Running: Lua script active Halted: Lua script stopped and not active Idle: Lua script is running but not currently performing any actions Waiting: Lua script running and waiting for a response Uploading: Lua script currently unloading from Room Controller Loading: Lua script currently loading to Room Controller Display Readings: Idle, Loading, Running, Waiting, Halted, Unloading
Program error Default value: No error Read Only	Program Error No error: No errors in Lua script Syntax: Syntax error in Lua script detected Runtime: Runtime error occurred while running Lua script Memory: Device has run out of memory for the script Display Readings No error, Syntax, Runtime, Memory

LUA GENERIC PARAMETERS

The Lua settings include twelve generic parameters that do not have a specific function or pre-configured functions. These parameters can be used in custom Lua scripts to store a value. They are also user configurable in their default state, but when assigned a value by a Lua script or via BACnet (Priority 1-16), they become read only (not configurable locally by the user) and the display color of the parameter changes to red. These parameters can also be configured via Zigbee, however they can still be modified locally by the user.

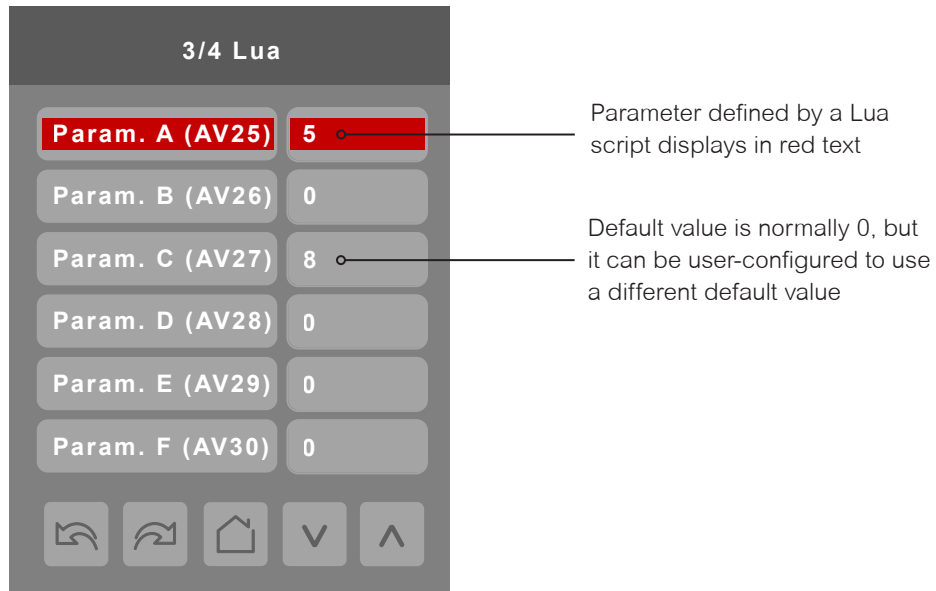

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Parameter A (AV25) Default value: 0 AV25	Lua Parameter A (AV25) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter B (AV26) Default value: 0 AV26	Lua Parameter B (AV26) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter C (AV27) Default value: 0 AV27	Lua Parameter C (AV27) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter D (AV28) Default value: 0 AV28	Lua Parameter D (AV28) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter E (AV29) Default value: 0 AV29	Lua Parameter E (AV29) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter F (AV30) Default value: 0 AV30	Lua Parameter F (AV30) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter G (AV225) Default value: 0 AV225	Lua Parameter G (AV225) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter H (AV226) Default value: 0 AV226	Lua Parameter H (AV226) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter I (AV227) Default value: 0 AV227	Lua Parameter I (AV227) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter J (AV228) Default value: 0 AV228	Lua Parameter J (AV228) The value of this parameter depends on what is assigned to it from a BAS or Lua script.

PARAMETER DETAILS

Configuration Parameters Default Value	Significance and Adjustments
Parameter K (AV229) Default value: 0 AV229	Lua Parameter K (AV229) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter L (AV230) Default value: 0 AV230	Lua Parameter L (AV230) The value of this parameter depends on what is assigned to it from a BAS or Lua script.